 
 




Heimgard

Motion Sensor




Quick start guide
version 1.0



Requires a
heimgard hub

What is in the box


A. Sensor

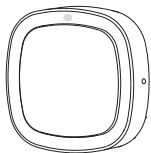


B. CR 17335 battery x 1





C. Wall mount

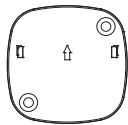

 D. Metal pin




Device overview

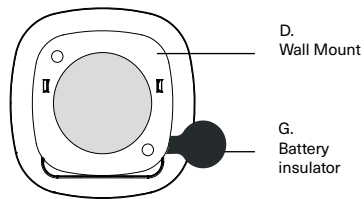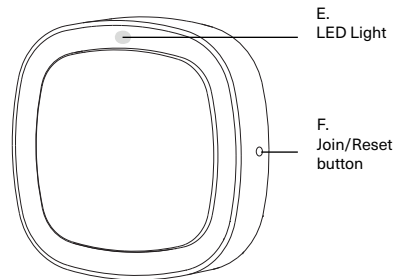


1.

Remove the wall mount (D) and the battery cover on the sensor (A). Then remove battery insulator (G) by pulling the plastic tab. Replace the back cover

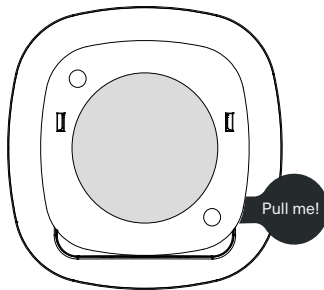


2.

 Open the Heimgard app and follow the steps listed here to connect to your device



3.

Insert the metal Pin (D) and press join Button (F) for 3 seconds while your app is scanning for the device

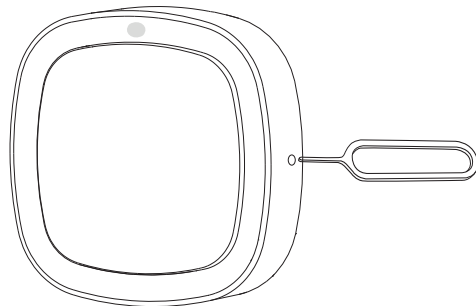

4.

Your device will appear in the Found Devices list. Click **configure** to add the device to a specific room.

Configure and use


This device is pre-configured as part of the alarm system. It will trigger the alarm when it is set in **Away** mode in the app. You can change this under **Advanced Settings** while configuring the device.

Configure the device as **Generic** if you don't want to trigger any alarms.


This device can be used to control lights and activate scenes when detecting motion. Set this up in **Advanced Settings** by clicking **Automation** and adding **Quick Rules**.

Mounting

Remove protective layer on the double-sided tape on the **Wall Mount (D)**. Press the wall mount firmly against the wall at the desired location.


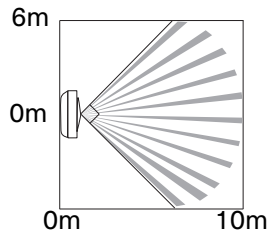


Example mounting

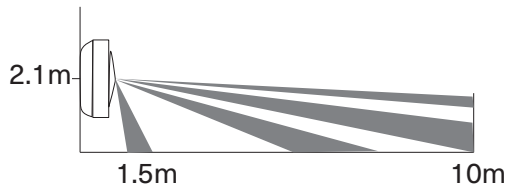

Pet friendly mounting


Rotate sensor 180°

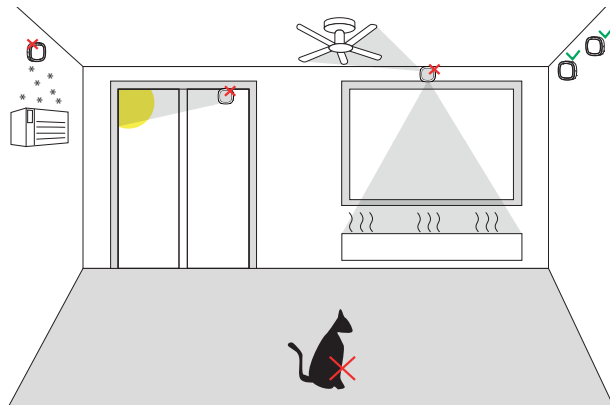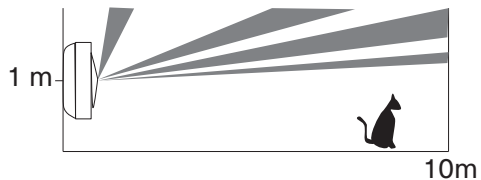

Avoid Placing:

- Outdoors
- Near air-conditioner or heater
- In direct sunlight
- Near rotating objects (i.e. ceiling fans)
- With pets (unless using pet friendly mounting method)

Example

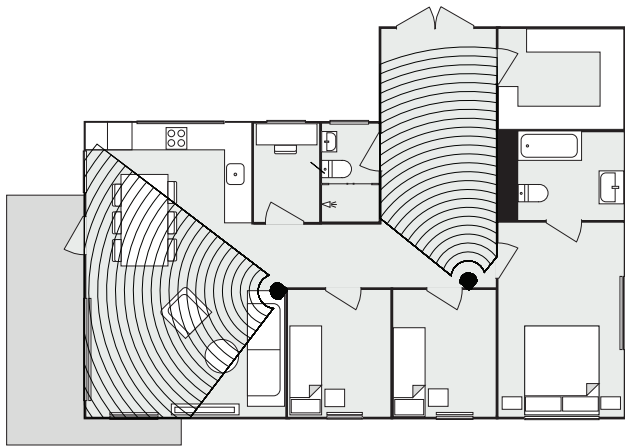

Troubleshooting

If the sensor triggers the alarm, even if there is no event of intrusion or movement, please verify the mounting and places to avoid sections.

If device disconnects unexpectedly, you may have to replace the battery.

LED description

Green Light

Flashes fast: Pairing to network

Flashes (x 6): Disconnecting from network

Red Light

Flashes (x 1): Detects motion

Factory Reset

Insert the **metal Pin (C)** and press **Reset Button (F)** for 5 seconds to disconnect the device from the network. The LED will flash (x 6) while disconnecting from network

Need help?

Website: heimgard.com/support

Email: support@heimgard.com

Facebook: facebook.com/heimgardnorge/

Telephone: +47 649 44 422

Visit heimgard.com for more information and tips on how to use.

Important safety information


1. Read through these instructions and follow accordingly.
2. Clean only with dry soft cloth. Household cleaners and solvents can damage the finish on your device.
3. Do not install near any heat sources such as radiators, heat registers, stoves or other device that produce heat.
4. Do not use this device near water.
5. **Warning: To reduce the risk of fire or electric shock, do not expose this device to rain or moisture.**
6. Do not expose device to dripping or splashing.
7. Protect the attached cables from being walked on or pinched, particularly at plugs, convenience receptacles, and the point the exit the apparatus.
8. Only use attachments/accessories specified by the manufacturer.
9. Unplug this device during lightning storms or when unused for long periods of time.
10. All servicing should be performed by qualified service personnel. Servicing is required when the device has been damaged in any way.
11. Operating temperature: -10°C to +50°C
12. Operating relative humidity: < 95% RH (no condensation)



Dispose the product properly at the end of life. This is electronic waste which should be recycled accordingly.



Heimgard

 heimgard.com