

Water Leak Detector



Quick start guide version 1.0



What is in the box

A. Water leak body and sensor



B. AAA battery x 2



C. Metal pin





Press and slide the back cover of the sWensor (A) to expose the battery. Remove the battery Insulator (G) by pulling the plastic tab. Replace the back cover



2.

1.

Open the **Heimgard app** and follow the steps listed here to connect to your device





Insert the metal pin (D) and press join button (F) for 3 seconds while your app is scanning for the device





Your device will appear in the Found Devices list. Click configure to add the device to a specific room

Mounting

Avoid locations where rainwater could trigger the sensor or where it could be immersed in water.

Remove the protective layer on the double-sided tape on the **device (A)**. Place the device on the wall.

Remove the protective layer over the double sided tape on the **sensor** (H). Place the sensor on the floor where leakage is most lightly to occur.



Mounting

example



Troubleshooting

If the sensor triggers the alarm, even if there is no event of a water leak, please verify the device is mounted properly.

If device disconnects unexpectantly, replace the battery.

LED description

Red Light Flashes 1 time: Set as alarm

Green Light Flashes fast: Pairing to network Flashes (x 6): Disconnecting from network

Factory

Reset

Insert the metal pin (D) and press reset button (F) for 5 seconds to disconnect the device from the network. The LED will flash (x 6) while disconnecting from network

Need help?

Website: heimgard.com/support

- Email: support@heimgard.com
- Facebook: facebook.com/heimgardnorge/

Telephone: +47 649 44 422

Visit heimgard.com for more information and tips on how to use.

Important safety information

- 1. Read through these instructions and follow accordingly.
- 2. Clean only with dry soft cloth. Household cleaners and solvents can damage the finish on your device.
- Do not install near any heat sources such as radiators, heat registers, stoves or other device that produce heat.
- 4. Do not use this device near water.
- Warning: To reduce the risk of fire or electric shock, do not expose this device to rain or moisture.
- 6. Do not expose device to dripping or splashing.
- Protect the attached cables from being walked on or pinched, particularly at plugs, convenience receptacles, and the point the exit the apparatus.
- 8. Only use attachments/accessories specified by the manufacturer.
- Unplug this device during lightning storms or when unused for long periods of time.
- All servicing should be performed by qualified service personnel. Servicing is required when the device has been damaged in any way.
- 11. Operating temperature: -15°C to +60°C
- 12. Operating relative humidity: < 95% RH (no condensation)



Dispose the product properly at the end of life. This is electronic waste which should be recycled accordingly.



