



Power LED

WPS LED
WPS status LED. WPS LED is flashing when setting up a WPS connection.

2.4GHz LED
LED that show status for the 2.4GHz network. The LED will flash when active.


5GHz LED
LED that show status for the 5GHz network. The LED's will flash when active.

Network ports LED
Show status for devices that are connected to the router by cable.

Internet LED
LED that show status for the Internet port. The LED will flash when active.

USB LED
Indicates if the USB port is correctly connected.

USB port
USB port for connecting a printer or USB hard disk drive.

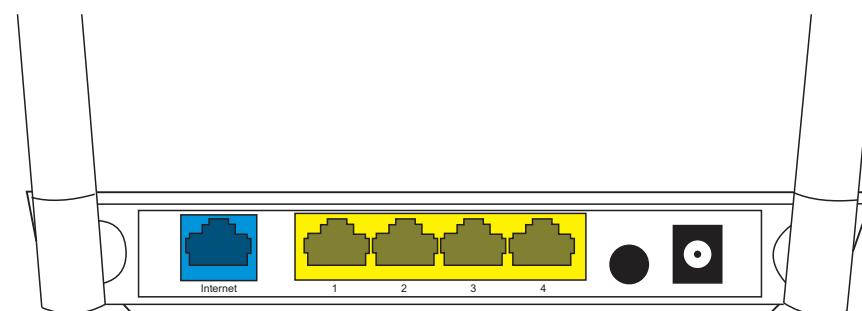

Internet port
Please connect your broadband modem to the internet port.

Network ports
Ports for connecting network devices by cable, such as computer, TV, Media Server, Network printer, VOIP adapter etc.

Power connector

Reset / WPS*
Reset: Hold for about 7 seconds to reset the router to factory default.
WPS: Hold for about to 1-2 seconds to initiate WPS connection.
* WPS is disabled as default and needed to be activated in router GUI (<http://192.168.38.1>) before use.



Declaration of Conformity with Regard to EU Directive 1999/5/EC (R&TTE Directive):
Hereby, Jensen Scandinavia AS, declares that this wireless router is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.
The declaration of conformity may be consulted at www.jensenscandinavia.com/rtte/

This equipment may be operated in all EU and EFTA countries: AT, BE, BG, CY, CZ, DK, EE, FI, FR, DE, GR, HU, IS, IE, IT, LV, LI, LT, LU, MT, NL, NO, PL, PT, RO, SK, SI, ES, SE, CH, TR, GB

PRODUCT USAGE RESTRICTIONS: This product is intended for indoor use only.

1

CONNECTING


A) Connect the power adapter to the router and to a power outlet.

B) Connect the enclosed network cable from your internet modem to the blue internet port on the router.



If your internet is delivered through cable-tv you should also ensure the following:

- Make sure there is no devices connected to your modem.
- Reset the modem by doing a power off/on.
- Wait further 2 minutes
- Continue with step 2

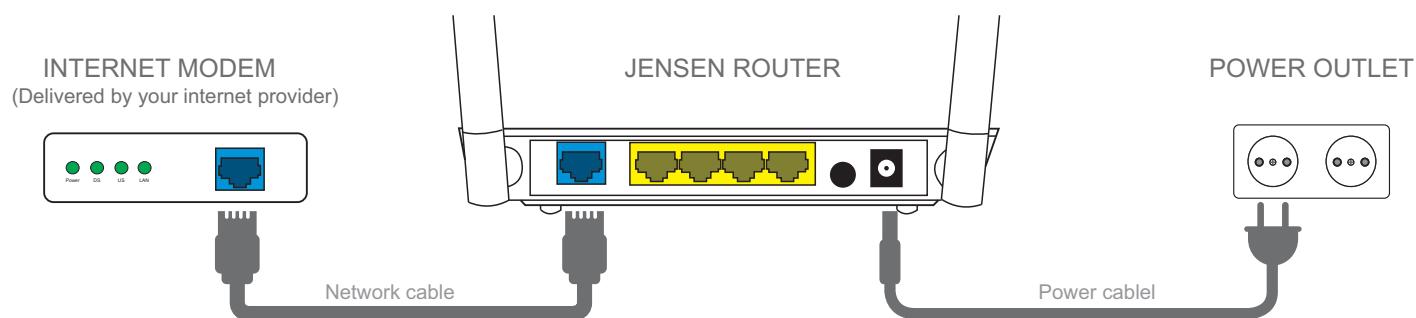

2

CONNECT TO WIRELESS NETWORK

Your new router has two wireless networks. One for 2.4GHz and one for 5GHz.

The router is pre-configured with network names and passwords. These are stated on the top of your router and the underside sticker.

Search for the wireless networks with your device and connect.

PC



Mac



iPhone/iPad



Android



FINISH

Your wireless device is now connected to internet and ready for use.

Problem

Solution

- No access to internet → Log into the router menu by entering `http://192.168.38.1` in your web browser. Username = admin og password = 1234. Select **EASY SETUP** from main menu and follow the setup wizard
- Change network name → Log into the router menu by entering `http://192.168.38.1` in your web browser. Username = admin og password = 1234. Select **WIRELESS** from main menu
- Change encryption key → Log into the router menu by entering `http://192.168.38.1` in your web browser. Username = admin og password = 1234. Select **WIRELESS** from main menu
- Change channel → Log into the router menu by entering `http://192.168.38.1` in your web browser. Username = admin og password = 1234. Select **WIRELESS** from main menu. Select the channel you want to use.

Customer support

If you need help with the setup you can call our free phone support. When calling you will be asked to enter a support-id. This is stated on top and underside sticker.

Norway 22 32 30 76
Sweden 08 38 30 00
Denmark 70 70 21 22
Finland 09 455 21 22

or send an email to

support@jensenscandinavia.com