 


Jensen®
SCANDINAVIA

USER MANUAL
MEDIA:LINK 7400

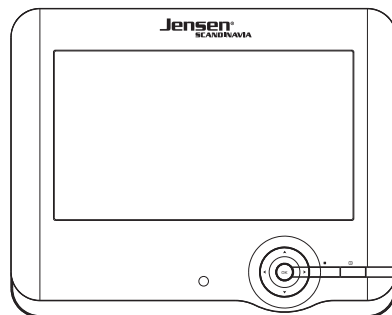

7" Widescreen TFT Portable DVD/CD/MP3 player

Please read this User Manual carefully to ensure proper use of this product and keep this manual for future reference.



Content


Important Safety Instructions	1
Package content.....	2
Panel Illustration.....	3
Remote Control.....	4
Connecting to a TV set.....	5
MP3/WMA/MPEG4 playing.....	5
Picture CD Playback	6
System Setup.....	7
Trouble-shooting.....	8
Specifications.....	9
Customer support.....	9
Declaration of conformity.....	10



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

Important Safety Instructions

 
- **Warning:** To reduce the risk of electric shock, do not remove the cover or back. There are no user-serviceable parts inside. Refer servicing to qualified personnel.
- **Warning:** To prevent fire or electric shock hazard, do not expose the unit to rain or moisture.
- Do not expose the Adaptor and product to water (dripping or splashing) and no objects filled with liquids, such as vases, should be placed on the unit.
- Keep the product away from direct sunlight and heat source such as radiators or stoves.
- Do not block the ventilation openings. Slots and openings on the unit are provided for ventilation. The openings should never be blocked by placing your product on a cushion, sofa or other similar surface.
- Do not place the product on unstable cart, stand, tripod, bracket or table.
- The unit may fall, resulting in possible damage or injury.
- Never place heavy or sharp objects on the LCD panel or frame.
- Only use the AC adapter included with product. Using any other adapter will void your warranty.
- Unplug the power from the outlet when the unit is not in use.
- Attention should be drawn to the environmental aspects of battery disposal.
- **WARNING:** The battery (battery or batteries or battery pack) shall not be exposed to excessive heat such as sunshine, fire or the like.
- **WARNING:** Excessive sound pressure from earphones or headphones can cause hearing loss.
- **WARNING:** Only use attachments/accessories specified provided by the manufacturer, the product is supplied by AC adapter, the AC adapter is used as disconnect device, the disconnect device shall remain readily operable.

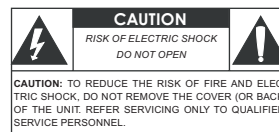

Warning: The USB memory stick should be plug in the unit directly. USB extension cable should not be used to avoid failing of data transferring and interference caused.

For the electrostatic discharge (ESD) test of EN55020 , It was found that manual operation (by switch power ON/OFF switch) is need to resume normal operation as intended after the test .

 Package content

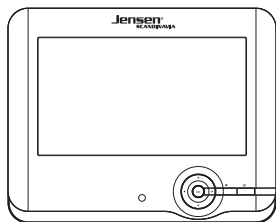

ML 7400



Car Strap



AV cable



Remote Control



Earphone

 
 
 


220V adapter




12V adapter

Panel Illustration

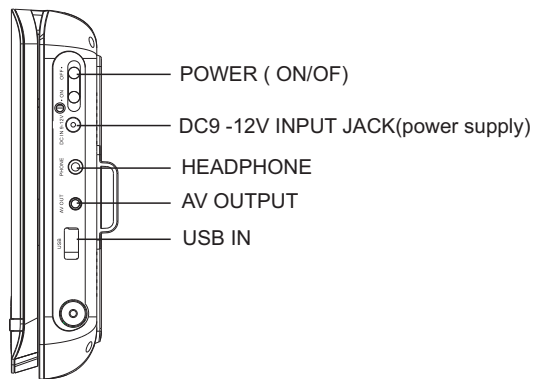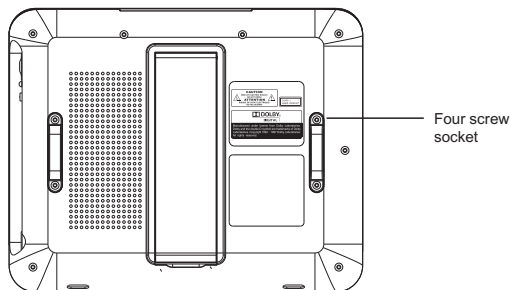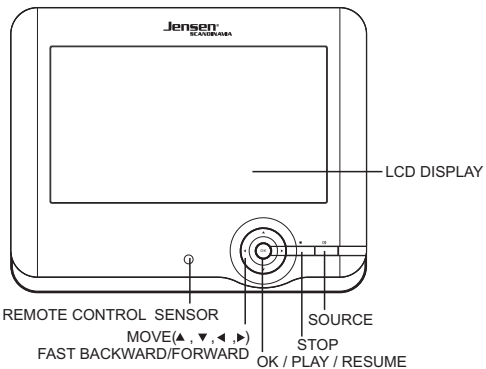

Remote Control

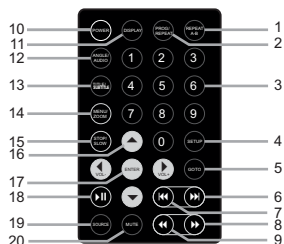 


1. **A-B REPEAT:** First press for the beginning of the chosen scene (set A); second press at the end of the chosen scene (set B). The whole selected scene automatically plays. Third press will disable the Repeat function.
2. **PROG/REPEAT:** Short press once will go to the Repeat Chapter, second short press will go to the Repeat Title, third short press will go to Repeat OFF. Long press will access the Prog to input with number keys the Title & Chapter.
3. **0-9 NUMBER KEYS:** Used to select channel numbers or input numbers in menus.
4. **SETUP:** Goes to the Setup menu.
5. **GOTO:** Goes to a specific time index/title/chapter
6. **NEXT:** Goes to the next chapter or file
7. **PREVIOUS:** Goes to previous chapter or file
8. **FAST FORWARD:** Skips forward, consecutive short presses to go to 5-level speed(X2->X4->X8->X16->PLAY).
9. **FAST REWIND:** Skips backwards, consecutive short presses to go to 5-level speed(X2->X4->X8->X16->PLAY).
10. **POWER :** will switch on or switch the unit to standby mode.
11. **DISPLAY:** Displays detailed information of the current file or disc.
12. **AUDIO/ANGLE:** Short press: Changes the audio mode selection (if different modes are available), Long press: Changes the viewing angle (if different modes are available).
13. **SUBTITLE/TITLE:** Short press: Changes subtitle mode (if choices of subtitles are available), Long press: DVD Title menu.
14. **MENU / ZOOM:** Short press to access the Menu; Long press to use the Zoom Function. Holding the pressed button will select the Zoom level: Q1, Q2, Q3, OFF.

15. **STOP / SLOW:** Short press: to Stop; Long press: for Slow motion. First long press to go to 1/2 speed; 2nd long press for 1/4 speed; third long press for 1/6 speed; fourth long press for 1/8 speed; fifth long press to go back to normal speed, 'PLAY'.
 16. **Direction keys :**
 - ▲, ▼ Navigates (Up/Down) the menu screens to select the file.
 - : Increases the volume.
 - ◄: Decreases the volume.
 17. **ENTER:** Confirms and enters options or to play files.
 18. **PLAY / PAUSE:** Starts or resumes media play.
 19. **SOURCE:** Press to switch between Disc or USB.
 20. **MUTE:** Disables Audio output.
- Note:** Press approximately 2 seconds for functions requiring Long press.

Preparation of the Remote Control

Place the remote control on an even surface and insert the supplied button cell into the remote control as follows.

 1. Push the button towards left.
2. Pull the battery loader out.
3. Insert the battery into the receptacle make sure the polarity matches the marks inside the component.
4. Insert the receptacle into the remote control.

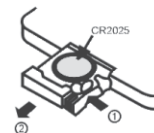

Cell data

Battery type: 1x CR2025, 3 V

Service life: approximately 1 year (for normal use and room temperature).

Using Of Remote Control

Point the remote control towards the main unit when operating. The remote control works best at a distance less than 5 m and at an angle of up to 30 ° to the front of the unit. No obstacles may stand in the way between remote control and infrared sensor and do not place the remote control in direct sunlight. If the remote control unit fails to work even when it is operated near the player, replace the battery.

 
Notes on batteries

If the remote control is not used for a long period of time, please remove the battery from the compartment.


Do not heat batteries or dispose of them in fires.

Do not dismantle, deform or modify batteries.

Connecting to a TV Set

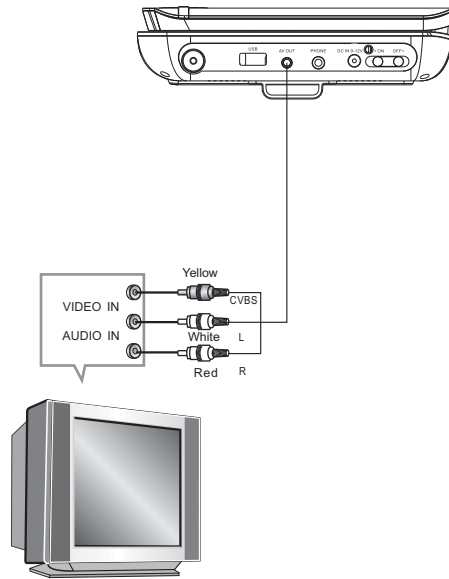

MP3/WMA/MPEG4 Playing

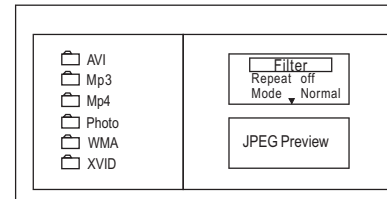 

The MP3/WMA/MPEG4 menu has directory structure as shown in the picture.

Press **Direction key** to choose the root directory and then press **ENTER** button to enter into the sub directory. Press **Direction key** to choose the desired track and then press **ENTER** or **PLAY** to enjoy the music or movie.

 
If you want to return to the upper menu, press **Direction key** to choose  the icon and press **ENTER** button.

Filter: Allows selecting the categories of files displayed in the browser list.

This selection is done among the 3 categories: Audio, Photo and Video.

Repeat: To switch different repeat playing mode

Mode: Select different playing mode

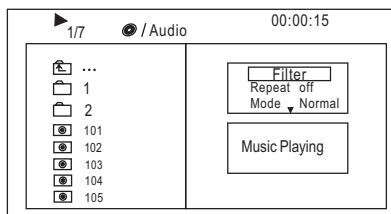

Normal: Shuffle mode is cancelled by toggling to a different **Mode** Option.

Shuffle: Shuffle mode enabled. When playback reaches the end of the current chapter/track, playback jumps to a random chapter/track. At the end of each chapter/track is reached, another random chapter/track will be played until all tracks/chapters have been played or the Shuffle mode is cancelled by toggling to a different **Mode** Option.

Music Intro: In this mode, the media will play to 10 seconds then skip to next media
Edit Mode: To enable programmed playback mode. When you select the mode, press **LEFT Direction key** to directory and press **ENTER** to choose the desired track and press **Add to program** to add in programmed playback.

Program view: Display program track.


Brower view: Display track directory.

Add to program: Choose the track press **Add to program** to add the track of the program play directory.

Clear program: In the complete stop state (press the **STOP** button twice), choose the track press **Clear program** to delete the track of the program play directory.

Picture CD Playback

The PICTURE CD disc has such a directory structure structure as shown in the following picture.

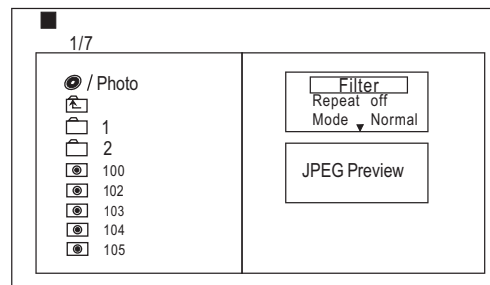 


Press **Direction key** to choose the root directory and then press **ENTER** button to enter into the sub directory. Press **Direction key** to choose the desired picture and then press **ENTER** or **PLAY** to enjoy the picture. If you want to return to the upper menu, press **Direction key** to choose  the icon and press **ENTER** button.

Image rotation

In picture play state, press **Direction key** to rotate the picture, press **ANGLE** button to change the picture scan mode.

System Setup

MENU OPERATION

Press the **SETUP** button on the remote control, the SETUP MENU(main)will be displayed.
After accessing the setup menu, press the direction buttons for up and down movement to select an item desired, then press the **ENTER** button to confirm.
Press **LEFT** direction button return to the menu of upper level.
To exit the setup, press the **SETUP** button again. In the SETUP MENU, you may choose any of the following options as you like.

LANGUAGE SETUP

Select **Language** in the setup menu, and display the **Language** submenu:

Language	OSD Language Subtitle
Video	MPEG4 Subtitle
Rating	Audio
Misc	DVD Menu

OSD Language

Use this item to select the language of the setup menu and screen display.

Subtitle

This option provides the preset subtitle language.
Follow the operating instructions stated in DVD MENU SETUP In combination with the desired option.

MPEG4 Subtitle

Choice different MPEG4 subtitle encoding option

Audio

Follow the operating instructions stated in **DVD MENU SETUP** In Combination with the desired option.
This option provides the built-in disc dubbing language options.

DVD Menu

This option provides the film s menu language options.
Follow the operating instructions stated in **DVD MENU SETUP** In combination with the desired option.

VIDEO SETUP

Select **Video** in the setup menu, and display the **Video** submenu:

Language	Aspect Ratio
Video	TV System Smart Picture
Rating	
Misc	

Aspect Ratio

The image display ratio is related to the recorded disc format. Some disc can not display images in the aspect ratio you choose. If you play a disc recorded in 4:3 format on a widescreen TV, black bars will appear on the left and right side of the screen. You must adjust the screen setting depending on the type of the television you have.

TV System

This product supports output of various system, including **NTSC**, **PAL**.
If your TV set has only **NTSC** or **PAL** system, the screen will blink and become colorless when a wrong system is selected.

Note: For more information of output format, refer to the instructions or your TV set.

Smart picture

Adjust display effect for video output:

Standard: default effect.

Bright: internal setting for bright view effect.

Soft: internal setting for soft view effect.

Dynamic: user adjust brightness, contrast, color etc.

RATING SETUP

Select **Rating** in the setup menu, and display the Rating submenu:

Note: Not all DVD support ratings.

Language	Parental Control Set Password
Video	
Rating	
Misc	

Parental Control

Selecting a Rating allows the user to set the parental control feature of the player. Select **Parental Control**, and press **ENTER** to change the different mode.

Note: Unlock the password before setting **Parental Control**.

Set Password

Use the 0-9 keys to input four digits (password), then press **ENTER** to confirm.

Note: If you forget your password, please use the universal password 6666 to unlock.

MISC SETUP

Select **MISC** in the setup menu, and display the submenu:

* Use Default Settings

Reset setup data to factory default and re-load disc.

Language	Use Default Settings
Video	
Rating	
Misc	

Trouble-shooting

Carry out the problem-solving measures described in the following section before contacting Customer Support.

Turn off the DVD player immediately as soon as you suspect a malfunction. Unplug the power plug and check whether the DVD player is unusually warm or whether smoke is rising from it.

Problem	Possible cause	Remedy
The DVD player does not work	Disc cover not closed	Close disc cover
	No disc inserted	Insert disc
	Disc inserted the wrong way	Insert disc with label facing up
	Disc dirty or deformed	Clean disc, or insert other disc
	Regional code of the player does not match the regional code of the DVD	Purchase DVD with corresponding regional code
	Moisture on lens	Remove disc and turn off DVD player for at least two hours
No audio	Device not properly connected	Check connexions and connect device in the correct way
	Headphones connected (loudspeaker off)	Pull out the headphones
	DVD sound settings incorrect	Check sound settings and set sound correctly
	Disc dirty or deformed	Clean disc, or insert other disc
No video	TV screen is off or in the incorrect video mode	Turn on LCD screen and/or set correct video mode
	Device not properly connected	Check connexions and connect device in the correct way
Poor video and/or audio quality	Disc dirty or deformed	Clean disc, or insert other disc
Repeated playback of a section	Loop mode is switched on	Exit the loop mode
	Disc dirty or deformed	Clean disc, or insert other disc
Remote control does not work	Obstacle between remote control and DVD player	Remove obstacle
	Remote control not pointed at DVD player	Point remote control directly at DVD player
	Remote control battery inserted the wrong way	Check the battery's polarity and, if necessary, insert battery correctly
	Battery too low or completely discharged	Insert new battery

Other possible causes for problems:

Static discharges or other external interferences can cause the DVD player to malfunction. When this happens, disconnect the power plug from the mains socket and plug it back in.

If the problem persists, disconnect the device from the mains again and contact Customer Service or a repair shop.

Specifications for ML7400

Play mode	NTSC/PAL
Disc mode	DVD, VCD, CD, MP3, CD-R, CD-RW, JPEG, DVD+ -R/W, MPEG4,
Video S/N ratio	≥ 65dB.
AV out resolution	≥500 lines.
Display	7" Color TFT-LCD 480x234
Power Voltage	DC IN 9 - 12V
Power consumption	≥12W
Power Voltage	DC IN 9 - 12V
Battery	7.4V 1300 mAh
Frequency response	fs 96KHz: 20Hz-20KHz:±/-1dB
D/A Converter	96KHz/24bit

Specifications are subject to change without notice.

Customer support

Free 3 months phone-support

Norwegian : 23 16 29 41

Swedish : 08 58 53 69 56

Danish :38 32 29 86

Finnish : 96 93 79 727

When you call our supportline you will be asked to enter support-id.

The Support-ID is same as serialnumber on your ML7400 unit.

Extended phone-support

Norwegian : 82 08 04 00

Swedish : 09 00 10 00 017

Danish : 90 13 60 70

Finnish : 06 00 13 911

Email support

support@jensenscandinavia.com

Remember to write your product name and full description of the problem, which other product you use in combination with the Jensen Scandinavia product and as much detail as possible to help our support help you.

Declaration of Conformity

For the following equipment:

Product name: **Jensen Media:Link 7400**

is herewith confirmed to comply with the requirements set out in the Council Directive on the Approximation of the Laws of the Member States relating to Electromagnetic Compability (89/336/EEC), Lowvoltage Directive (73/23/EEC) and the Amandment Directive (93/68/EEC). For the evaluation regarding the Directives, the following standards were applied:

EN 301-357

The product also carries the CE mark according to the R&TTE directive 1999/5/EC.

The following manufacturer is responsible for this declaration:

Jensen Scandinavia AS
Per Krohgsvei 4a
1065 Oslo
Norway



Technical Manager