 



WIRELESS ROUTER EAGLE 1000

INSTALLATION GUIDE ENGLISH

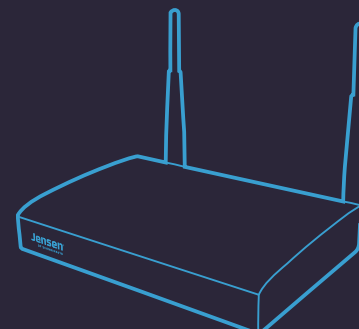

1 Connect

 Connect the power adapter (1) then the network cable between your broadband modem and «internet» port (2).

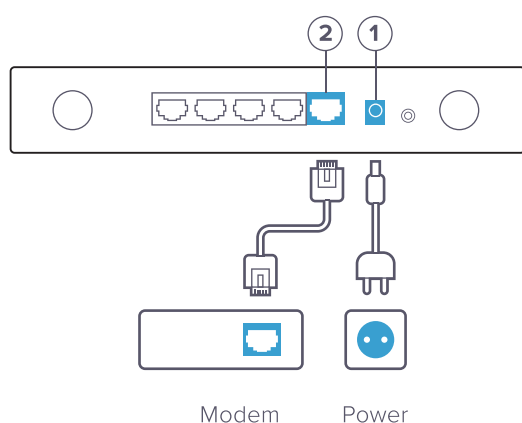

2 Your network

Your wireless network is already configured. Your personal network name (1) and password (2) can be found on the underside of EAGLE 1000.

Wireless network name
(SSID)

2.4G: EAGLE05886
5G: EAGLE05886_5GHz

Default security keys

CVRVtej9

 
3 Choose network

With your PC, smartphone or tablet, you will be able to choose your personal network under network settings.




4 Finish

You are now connected to your EAGLE 1000. Start your browser to check if you are connected to the Internet.

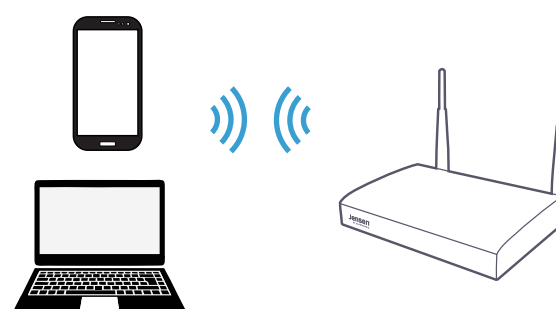

5 Log in (Settings)

 To access the settings on your EAGLE 1000, log in to the router by typing <http://192.168.38.1> in your browser. (username = admin and password = 1234)

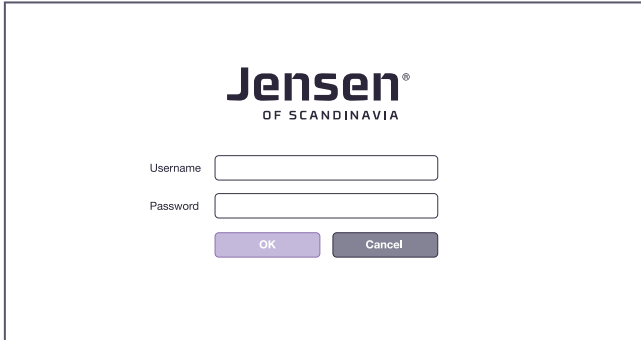


The login page for the Jensen EAGLE 1000 router. It features the Jensen logo at the top, followed by 'OF SCANDINAVIA'. Below this are two input fields: 'Username' and 'Password'. At the bottom are two buttons: 'OK' and 'Cancel'.

* Tips

Extend your wireless network

EAGLE 1000 works perfectly with a LYNX 2400 Extender.

 Area of range:  EAGLE 1000  LYNX 2400

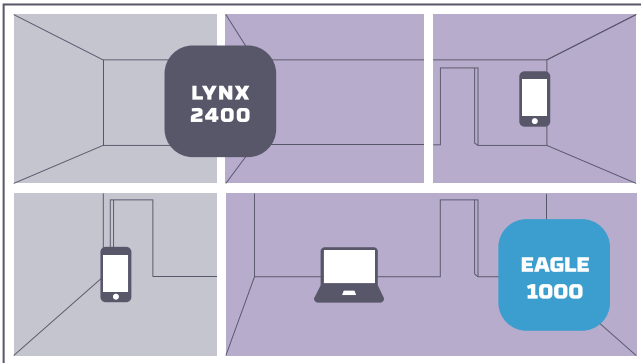

Support

Free 12 months of phone support!

Norway: 22 32 30 76

Sweden: 08 38 30 00

Denmark: 70 70 21 22

Finland: 09 455 21 22

Opening hours:

Monday-Friday: 08.00-20.00

Saturday: 14.00-18.00

You can also reach us by e-mail at support@jensenscandinavia.com

Easy Setup

If you want to customize EAGLE 1000 with your own username, password etc. the Easy Setup menu will provide you a step by step walkthrough.

? Frequently Asked Questions

No connection to internet?

Make sure that the internet modem has been connected as shown in step 1, and that the device you are using (PC, smart phone etc.) is connected to the EAGLE 1000. Reboot your internet modem by switching it off, and then on again. Wait for 5 minutes before checking your internet connection.

Why is my wireless network unstable/slow?

Most likely this is due to interferences from other wireless networks in your area. The solution is to change the wireless channel on the EAGLE 1000. Please look at the EAGLE 1000 manual you find at www.jensenofscandinavia.com/downloads

How do I reset the EAGLE 1000?

Press the WPS/RESET button for 30 seconds.

What is my username and password to the EAGLE 1000 settings menu?

URL: <http://192.168.38.1>

Default username = admin

Default password = 1234

Declaration of Conformity with Regard to EU Directive 1995/5/EC (R&ETTE) Directive: Hereby, Jensen of Scandinavia AS, declares that this wireless range extender is in compliance with the essential requirements and other relevant provisions of Directive 1995/5/EC. The declaration of conformity may be consulted at www.jensenofscandinavia.com/rtte

This requirement may be operated in all EU and EFTA countries:

AT, BE, BG, CY, CZ, DK, EE, FI, FR, DE, GR, HU, IS, IE, IT, LV, LI, LT, LU, MT, NL, NO, PL, PT, RO, SK, SI, ES, SE, CH, TR, BG

Product usage restrictions:

This product is intended for indoor use only.

Jensen
OF SCANDINAVIA

www.jensenofscandinavia.com

