
Jensen®
SCANDINAVIA



Media:Link 10200

DVD VCD CD MP3 JPG (Support MPEG4)

DVD

Operating Manual

10.2" Portable DVD player



CONTENTS

1	PRECAUTIONS	01	7	THE RECHARGEABLE BATTERY	15
2	CAUTIONS	03		PRECAUTIONS	15
3	CHECKING ACCESSORIES	05		BATTERY STORAGE	15
4	SPECIFICATIONS	06		BATTERY LIFE	15
5	PART NAMES AND FUNCTIONS	07		USING THE BATTERY	15
	PART NAMES ON THE FRONT OF THE PLAYER	07		INSTALLING AND REMOVING THE BATTERY	16
	PART NAMES ON THE BACK OF THE PLAYER	07		RECHARGING BATTERY USING AC-DC ADAPTER	17
	CONTROL KEYS	08		CAUTIONS	17
	PART NAMES ON THE LEFT SIDE OF THE PLAYER	09	8	CONNECTING THE PLAYER TO OTHER COMPONENTS	18
	PART NAMES ON THE RIGHT SIDE OF THE PLAYER	09		USING THE AC-DC ADAPTER	18
	PART NAMES OF THE BATTERY	10		USING THE EARPHONE	18
	REMOTE CONTROL UNIT	11		CONNECTING TO USB STORAGE	19
6	THE REMOTE CONTROL	13		CONNECTING TO MEMORY CARD	19
	PRECAUTIONS	13		CONNECTING TO A TV SET	20
	RANGE AND ANGLE OF USE	13		CONNECTING TO AN AMPLIFIER THAT HAS NOT-DIGITAL DECODER (DOLBY/MPEG)	21
	REPLACING THE BUTTON-TYPE BATTERY	14		CONNECTING TO A ACTIVE SPEAKER SYSTEM	22
				CONNECTING TO AN AUDIO/VIDEO PLAYER SYSTEM	23

CONTENTS

9	BASIC OPERATIONS	24	10	MAIN UNIT SETTINGS	32
	TURNING ON/OFF THE MAIN UNIT	24		SELECTING A TV SYSTEM	32
	PLAYING DISCS	24		SETTING SCREEN SAVER	32
	REMOVING DISCS	24		SELECTING A TV SCALE	33
	ADJUSTING BRIGHTNESS/CONTRAST/COLOR/			SETTING PARRENT LOCK	33
	SCALING/REVERSE/AV MODE/VOLUME	25		SETTING PARRENT LOCK LEVEL	34
	STOPPING PLAYBACK	26		DEFAULT SETTINGS	34
	PAUSING PLAYBACK	26		SELECTING AN OSD LANGUAGE	34
	FAST-FORWARDING AND FAST-REVERSING	26		SELECTING AN AUDIO LANGUAGE	34
	SLOW AND FRAME-BY-FRAME PLAYBACK	26		SELECTING A SUBTITLE LANGUAGE	35
	REPEAT PLAYBACK	27		SELECTING A MENU LANGUAGE	35
	SEARCHING THE DISC	27		SELECTING DIGITAL AUDIO OUTPUT	35
	PROGRAM PLAYBACK	28		ADJUSTING KEY	36
	USING OSD	29		ADJUSTING BRIGHTNESS	36
	SELECTING SUBTITLES	29		ADJUSTING CONTRAST	36
	SELECTING AUDIO SETTINGS	29		ADJUSTING SATURATION	36
	SELECTING ANGLES	29		ADJUSTING SHARPNESS	37
	PLAYBACK OF MP3 AND JPEG DISCS	30			
	PLAYBACK OF FILES STORED IN USB STORAGE	31		TROUBLESHOOTING	38
	PLAYBACK OF FILES STORES IN MEMORY CARD	31		DECLARATION OF CONFIRMITY	39

Thank you for purchasing M110200. Please read this manual carefully before operating and retain it for future reference. It will be helpful to you if you encounter any operational problem.

WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE, DRIPPING OR SPLASHING AND THAT NO OBJECTS FILLED WITH LIQUIDS, SUCH AS VASES, SHALL BE PLACED ON THE APPARATUS. DANGEROUS HIGH VOLTAGES ARE PRESENT INSIDE THE ENCLOSURE. DO NOT OPEN THE CABINET. REFER SERVICING TO QUALIFIED PERSONNEL ONLY.

LASER: Inside the Digital Video Disc player, there is a Laser System. To ensure proper use of this product, please read this owner's manual carefully and return it for future reference.

DOLBY: Manufactured under license from Dolby Laboratories. "Dolby" and the double-D symbol are trademarks of Dolby Laboratories.



Use of controls, adjustments or the performance of procedures other than those specified may result in hazardous exposure. To prevent direct exposure to the laser beam, do not try to open the enclosure. DO NOT STARE INTO THE BEAM

LASER	
Type	Semiconductor laser GaAlAs
Wave length	650 nm/780nm
Output Power	5mW
Beam divergence	60degree



WARNING:

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

CAUTION:

The defective units shall not be disassembled or opened without our company's prior consent or authorization.

CAUTION

RISK OF ELECTRIC SHOCK. DO NOT OPEN

To reduce the risk of electric shock, do not remove cover (or back).
No user serviceable parts inside. Refer servicing to qualified service personnel.



The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert user to the presence of uninsulated "dangerous voltage" within the product enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user of the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



INVISIBLE EXPOSURE WHEN OPEN AND WHEN INTERLOCK
FAILED OR DEFEATED.
AVOID DIRECT EXPOSURE TO THE LASER BEAM.

Do not move the player during playback

During playback, the disc spins at high speed, so do not lift or move the player. Doing so may damage the disc.

Place of installation

Select a stable place near the TV or stereo system to which you are going to connect the player. Do not place the player on the top of a TV or color monitor. Install the player away from cassette decks or other devices which are easily affected by magnetic forces.

Do not place objects on top of the player

Do not place any objects on top of the player.

Turn off the power when not using the player

If the player is connected to your TV but not in use then switch the power off this will prevent interference with your normal TV picture. Noise problems may also be experienced if used near a radio.

Special note regarding use of player in vehicles

When carrying on planes

Read the airline company's rules.

When carrying in hospitals

Read the hospital's rules.

AC/DC Adapter using.

- Please remove the AC/DC adapter or switch off the power supply before cleaning the unit.
- Please remove the AC/DC adapter when it is shining.
- AC/DC is used in 110~240V AC.
- Please remove the AC/DC adapter or switch off the power supply if you do not use this DVD player for a long time.

When using with car power cable in cars

Please turn on the engine and then connect with the car power cable.

Cleaning the player

To clean dirt off the liquid crystal display, wipe the display gently with a soft, dry cloth (such as an eyeglass cleaning cloth). Note that leaving water droplets on the display for long periods of time may result in discoloration or stains. For tough dirt, use a commercially available liquid crystal display cleaner.

Copyrights

Unauthorized duplication, broadcast, public performance or rental of discs is prohibited by law.

After unpacking, check that all the accessories listed below are included.

<p>AC-DC power adapter</p> 	<p>Car power supply cable</p> 	<p>AV cables</p> 
<p>IR Remote Control</p> 	<p>Earphone</p> 	<p>Carry bag</p> 
<p>Instruction Manual</p> 	<p>Multilanguage QIG</p> 	<p>Headrest bag</p> 

The discs listed below can be played on this player.



DVDs 8cm/12cm;



Video CDs 8cm/12cm;



Audio CDs 8cm/12cm;



MP3 CDs 8cm/12cm;



JPG CDs 8cm/12cm;



This product supports the DivX® media format


Note:

Do not attempt to play cracked, warped, damaged discs. Playing a bad disc could severely damage the playback mechanism.

Specifications


Disc type	DVD Video Video CD CD-DA MP3 JPEG
Audio output	LINE out (20Hz - 20kHz) Earphone output Coaxial digital audio output
Video output	Video output : 1.0Vpp/75ohms
LCD panel	10.2" color TFT (16:9) Pixel : 800x480RGB
Power	AC-DC adapter 12V/1.5A Battery 7.4V
Unit size	310x210x40mm
Weight (Include battery)	1200 g
Working temperature	5°C~45°C

Part names on the front of the player

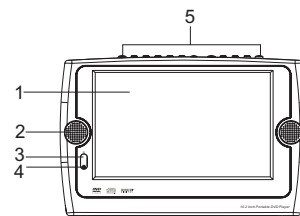


1. LCD Display
2. Speaker
3. IR received window
4. Power LED indicator
 - ▶ RED : CD/MP3/DVD discs are played
 - ▶ Green : The Battery is fully charged.
 - ▶ Blinking green : When ML10200 is turned off and the battery is charging.
5. Control keys

Part names on the back of the player

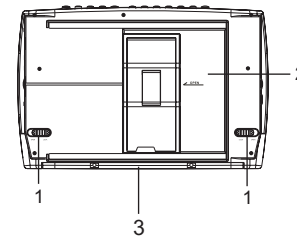


1. Battery lock
2. Disc cover
3. Battery socket

Control keys

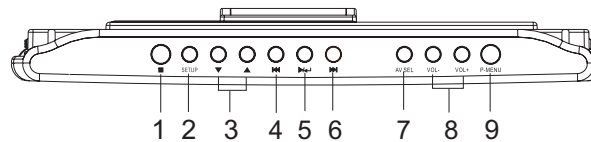

1. ■ STOP
Press to stop playback, press again to go back to startscreen.
2. SETUP
Press to access the DVD Setup menu to modify the DVD player settings when in DVD mode.
3. ▲/▼ (Up/Down)
Press to move the cursor up / down.
4. ⏮ (Previous)
Press to go to the previous track or chapter.
5. ⏭ (Pause / Enter)
Press to begin playback; Press to pause playback during playing; Press again to resume playback. Press to confirm items or settings.
6. ⏭ (next)
Press to go to the next track or chapter.
7. AV SEL
Press to switch between input mode
8. VOL + / VOL -
Press to increase / reduce the volume or a value in the menu.
9. Press to access the picture menu.
(Brightness, contrast, color, Sharpness, Screen mode, screen on/off and reset)


Part names on the left side of the player

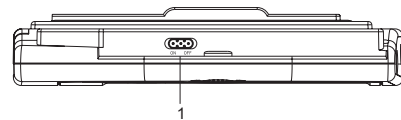

1. Power Switch

- Slide power switch to position "ON", then the player turns on.
- Slide power switch to position "OFF", then the player turns off.

Part names on the right side of the player

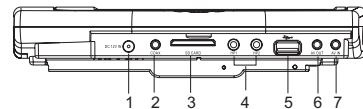

1. DC 12V IN

Connecting the AC-DC adapter or car adapter to DC IN jack.

2. Coaxial

This is used in combination with the digital audio input devices.

3. Memory Socket

Inserting the memory card (SD/MMC/MS) to the memory socket of player.

4. Headphone Jack

Plugging the headphone in the HP1 or HP2 jack of player.

5. USB Socket

Connecting USB storage to the player.

6. AV Out

This is used in combination with the audio/ input devices.


7. AV In

This is used in combination with the audio/video video output devices.


Part names of the battery

1. Battery lock button

2. Battery connector

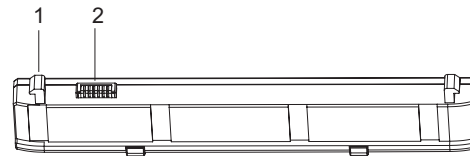

The Remote Control

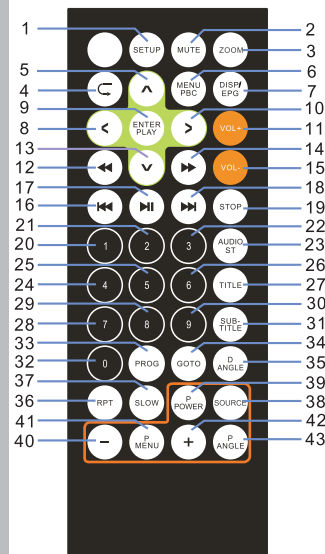

- | | | | |
|---|---|----|---|
| 1 | SETUP | 9 | ENTER |
| | Press to access SETUP menu | | Confirm the items or settings |
| 2 | MUTE | 10 | > |
| | Turn the sound on/off | | Move the cursor right and rotate the picture clockwise |
| 3 | ZOOM | 11 | VOL + |
| | Zoom picture in DVD mode | | Increase the volume |
| 4 | RECALL | 12 | BACKWARD ⏮ |
| | Return to the disc root menu | | Press to fast backward playback |
| 5 | ^ | 13 | ∇ |
| | Move the cursor up / reverse picture up and down | | Move the cursor down and reverse the picture left and right |
| 6 | Menu PBC | 14 | FORWARD ⏭ |
| | Display the root menu of disc | | Press to fast forward playback |
| 7 | DISP/EPG | 15 | VOL - |
| | Display the information of disc (title, chapter, track, time, etc.) | | Decrease volume |
| 8 | < | 16 | PREV ⏮ |
| | Move the cursor left and rotate the picture anticlockwise | | Go to the previous track or chapter |

The Remote Control



- | | | | |
|-------------------------|---|----|---|
| 17 | PLAY/PAUSE ▶ | 36 | REPEAT |
| | Press to play or pause the CD or DVD | | Repeat the track, chapter or the entire disc |
| 18 | NEXT ►► | 37 | SLOW |
| | Go to next track or chapter | | Press to reduce the speed of playback |
| 19 | STOP | 38 | SOURCE |
| | Press to stop playback | | Press to switch between DVD and AUX mode |
| 20-22, 24-26, 28-30, 32 | | 39 | P POWER |
| | Select track number directly | | Turn the screen on or off |
| 23 | AUDIO ST | 40 | - |
| | DVD : Select the audio language | | Press to decrease the value of selected items |
| | VCD or CD : Select the audio channel | | when in the TFT setup menu |
| 27 | TITLE | 41 | P MENU |
| | Display the DVD title | | Press to access the input signal. (Brightness, contrast, color, sharpness, reset, source, screen mode, screen on/off) |
| 33 | PROGRAM | 42 | + |
| | Program the playback sequence | | Press to increase the value of selected items |
| 34 | GOTO | | when in the TFT setup menu |
| | Start playback at a selected track, chapter or time | 43 | P ANGLE |
| 35 | D ANGLE (DVD only) | | Switch screen normal or reverse |
| | Press to select the disc's angle | | |

Precautions

- Please pull out the PVC before the remote control unit is being used the first time
- Don't drop or step on the remote control unit or subject it to shocks
- Note that it may not be possible to operate the main unit if there are obstacles between it and the remote sensor
- Don't expose the remote sensor to strong light.
- Use the remote control unit within the specified operating range and angle.


Range and Angle of use

- <1> Horizontal: $\pm 30^\circ$
- <2> Vertical: $\pm 30^\circ$
- <3> Distance: 5m

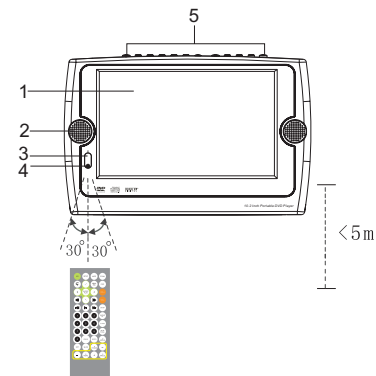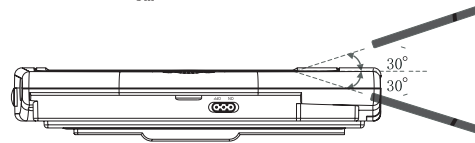


Replacing the button-type battery (included)


- 1 Insert your finger nails into A and B on the diagram below, press A according to the direction, then pull out the battery holder.
- 3 Fit the battery holder back to its place.

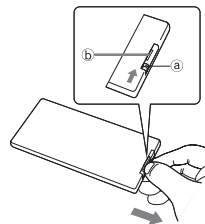

- 2 Remove the old battery, then insert the new battery into the battery holder with the + side facing up.

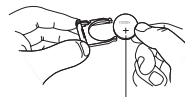

Lithium battery (Cr2025)

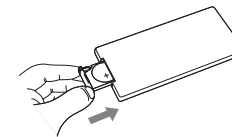

Note:

To prevent leakage of fluid from the lithium battery, remove the battery when not using the remote control for a long time (one month or more). If the battery leaks fluid, carefully wipe it out of the battery case, then change a new one.

Precautions

- Please fully charge the battery before the first time.
- The battery may not recharge fully when it is in a hot environment.
- It's normal that the battery unit temperature is about 20°C higher than the surrounding temperature during a recharge.

Battery storage

- Please place the battery in a proper environment (-5°C~35°C).
- Please recharge once a month if the battery is not used for a long time.

Battery life

- The battery unit can be used for about 300 cycles of recharging and operations, though this is variable depending on the operating conditions.


Using the battery

- The picture may be unstable if the battery power is not enough.
- Please recharge the battery when the main unit is powered off. The battery recharge will take about 4 to 5 hours.
- When the battery power is depleted, OSD will show out "WARNING LOW BATTERY".

Installing the battery

Please install the battery unit as following:

1. Attach the battery unit to the main unit.
2. Pull the lock button to left and right as follow arrow 1, until the battery unit is locked to the main unit.
3. Then the power LED indicator is light on.

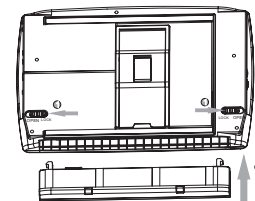


Removing the battery

Please remove the battery unit as following:

1. Turn off the main unit
2. Press the battery lock key and pull down the battery unit, then the battery is removed.

Note:

Please turn off the player before installing and removing the battery.

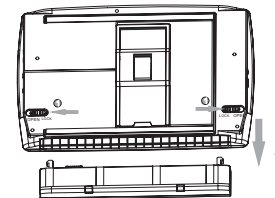

Recharging the battery by using AC-DC adapter


Please recharge the battery as follows:

- 1 Install the battery
- 2 Connect the AC-DC adapter to the player

- When charging, the charge LED indicator lights up and keeps blinking. (Green)
- When the battery is full, the LED indicator is green.
- The charging time is around 4 to 5 hours. (Player is powered off)

Note:

- Please place the battery on a level, flat surface for recharging.
- Failure to do so may cause the battery short circuit.

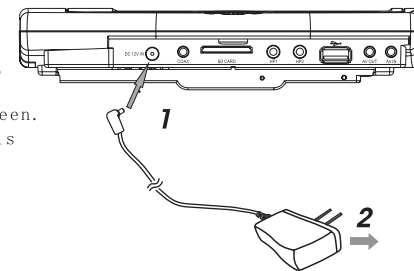

Cautions


- The temperature during recharging affects the recharging efficiency.
- Recharging is most efficient between 0°C and 45°C.
- When the battery unit is hot, it may take longer than usual time to recharge it. Sometimes, it cannot be recharged when it's hot. Wait for the battery unit to cool down before recharging it.

Using the AC-DC adapter

Connect the power cord to the DC IN jack as shown in the illustration.

Note:


AC-DC adapter specification: 12V/1.5A
Please use the adapter that is the standard accessory of the main unit.

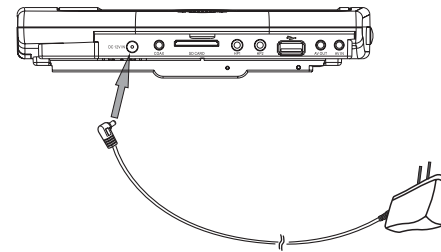
Using the earphone

- Connect the earphone plug securely to the earphone jack on the main unit.
- Using +/- to adjust the volume.

Note:

Please do not play DTS disc. It will produce some strong noises.
Insert the earphones plug securely , otherwise sound will not be heard.

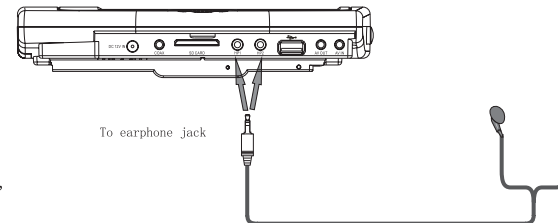


Connecting to USB storage

- 1 Please connect the USB storage to the USB terminal of the main unit
- 2 The main unit can read the contents in the USB storage automatically

Note:

- The USB terminal of the main unit support USB.
- The main unit can read the contents of USB storage when there is no disc in the main unit.

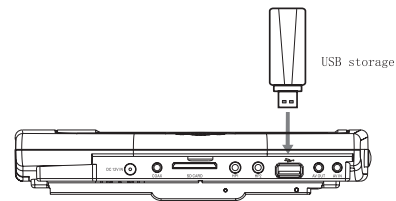


Connecting to memory card (SD/MMC/MS)

- 1 Please insert the memory card to the memory socket of the main unit
- 2 The main unit can read the contents in the memory card automatically

Note:


- Please insert the memory card in right direction.
- The main unit can read the contents of memory card when there is no disc in the main unit.

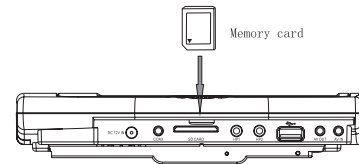

Turn off the power of the player and the devices before connecting.

Connecting to a TV set

Output the signals from the player's AV out to a TV set.

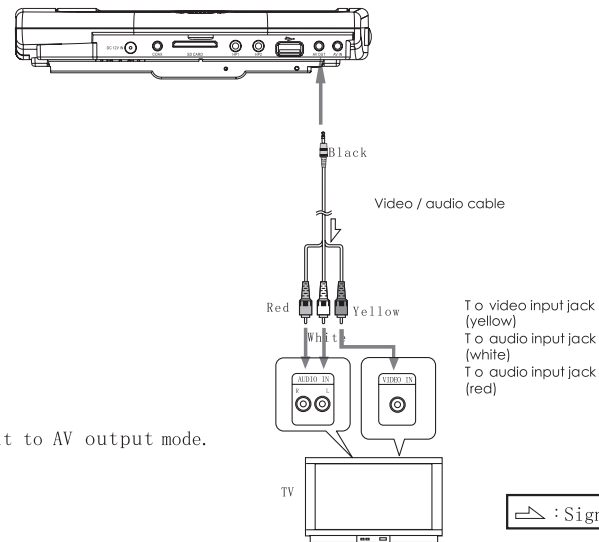

Note:

- Please set the main unit to AV output mode.


Connecting to a digital amplifier that has not Dolby Digital / DTS / MPEG compatible

Output the digital signals from the player's digital output to a digital amplifier that is not Dolby Digital / DTS / MPEG compatible.

Notes:

- Carefully check the player's digital output settings before connecting the player to an amplifier which is not Dolby Digital / DTS / MPEG compatible.

Do not play DVDs when the audio settings are not correct. Or may cause strong noise and damage your speakers.

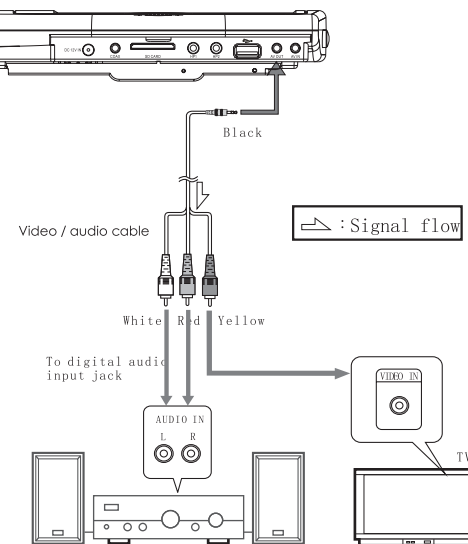


Connecting to a Dolby Digital / DTS / MPEG decoder or an amplifier with built-in decoder


With this player, you can enjoy powerful Dolby Digital, DTS or MPEG sound. Output the digital signals from the player's digital output to a decoder or amplifier with built-in decoder.

Note :


- For a compatible decoder or amplifier, 5 speakers (front left/right/center/surround left/right) and a subwoofer are required to enjoy Dolby Digital/5.1-channel sound.
- Before connecting, make sure to turn off the power of this DVD player, amplifier and TV.

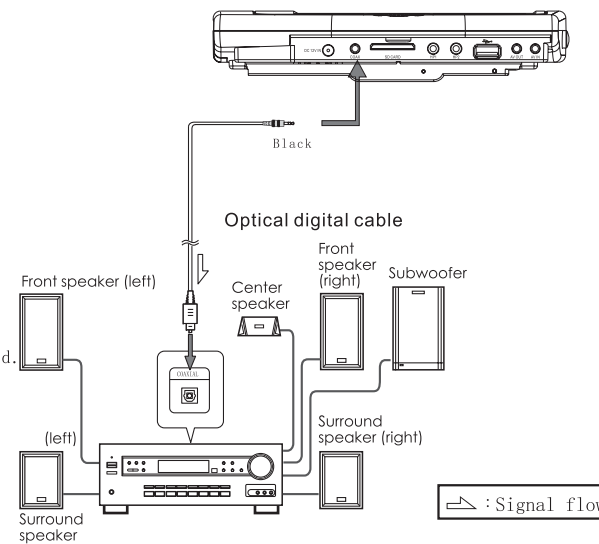

Connecting to a Audio/Video player system

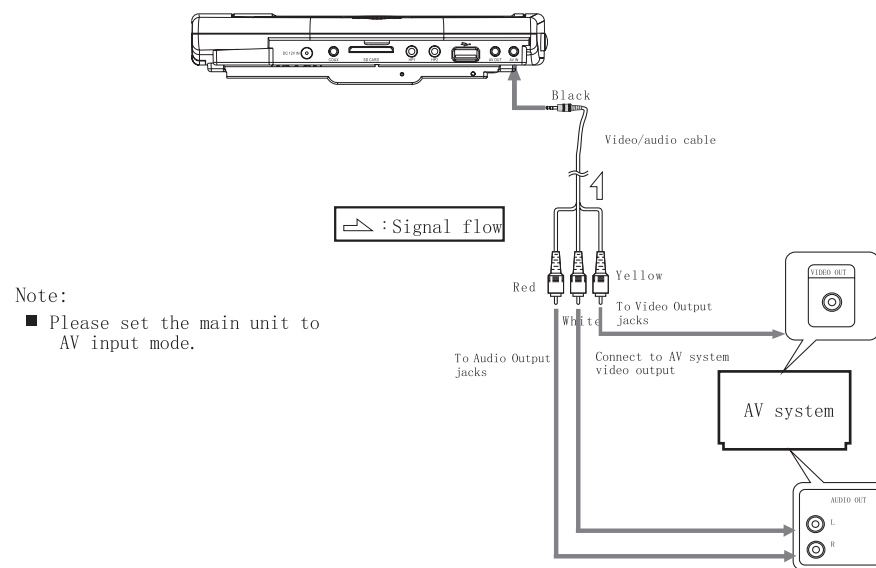

Playing discs

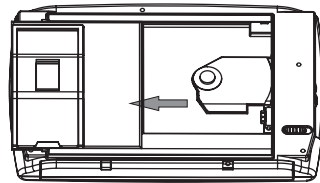

- 1 Install the battery or plug the AC-DC cord to DC IN jack.
- 2 Turn on the player.
- 3 Slide the disc cover and put in the disc.
- 4 Loading disc, the disc type will be shown on the screen.
5. Press PLAY to start playback.

- Please place the disc carefully
- Do not play poor quality discs to prevent damage from the lens.

Removing discs

- 1 Press STOP to stop playback.
- 2 Take out the disc.

Adjusting picture(Brightness/Contrast/Color/Sharpness/Screen mode/Screen on/off)

Press P MENU to cycle through the TFT's menu as brightness, contrast, color, sharpness, screen mode, screen on/off.

AUX/DVD	WIDE
BRIGHTNESS	50
CONTRAST	50
COLOR	50
SHARPNESS	50
SCREEN MODE	WIDE
SCREEN ON/OFF	ON
RESET	

You can set a mode suitable for the subject picture.

Hint:


- Press +/- to adjust the value of selected items.
- Press AV to switch from AV IN mode to DVD mode.
- The DVD's screen is closed when in AV IN mode.

Hint:

- Press +/- to adjust the volume directly when the unit is not in menu mode.

Stopping playback

- 1 Press STOP to stop playback. The position is memorized.
- 2 Press PLAY to resume playback.
- 3 Press STOP again to fully stop playback of the disc.

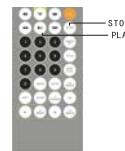


Note:

- RESUME function only allows for DVD/VCD/CD (after playing 30 seconds)
- For MP3/JPG/JPEG, RESUME function is not available.


Pausing playback

- 1 Press PLAY/PAUSE to pause the disc when playback.
- 2 Press PLAY/PAUSE to resume playback.

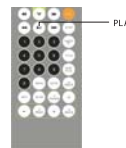

Fast-forwarding/Fast-reversing


During playback, press REV or FWD to fast reverse or forward playback at X2, X4, X8, X20 and normal speed.

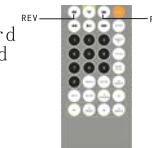

Hint: No sound during fast-forward/fast-reverse.

Slow and frame-by-frame playback

- 1 Press SLOW to slow playback at 1/2, 1/3, 1/4, 1/5, 1/6, 1/7 and normal speed.

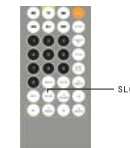


Note:

- No sound during frame-by-frame playback.
- For CD/MP3, this function is not available.


Repeat playback

- 1 To repeat a title, a chapter or a track
- Press REPEAT to select a title, chapter or track during playback.
 - DVD: title, chapter;
VCD or CD: track.

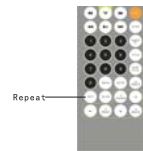

Searching the disc

- Press GOTO during playback.
- Using cursor key to select the chapter or track.
- Input the numbers directly to specify the preferred chapter or track.
- Press ENTER to confirm.
- Press GOTO to resume playback.

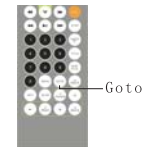

Program playback

The main unit may play the list according to the following program list:


1. Press PGM, the menu will be shown on the screen.

Hint:

- DVD: T for Title
C for Chapter
- CD/VCD: "[->]" for Track

PROG											
T C				T C				T C			
1	--	:	---	5	--	:	---	9	--	:	---
2	--	:	---	6	--	:	---	10	--	:	---
3	--	:	---	7	--	:	---	11	--	:	---
4	--	:	---	8	--	:	---	12	--	:	---
Play				Clear				Exit			

Note: Some discs may not offer title, chapter or track numbers

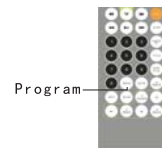

2. Enter numbers by using cursor key to create the list as shown in the illustration.

PROG											
T C				T C				T C			
1	01	:	001	5	--	:	---	9	--	:	---
2	02	:	002	6	--	:	---	10	--	:	---
3	--	:	---	7	--	:	---	11	--	:	---
4	--	:	---	8	--	:	---	12	--	:	---
Play				Clear				Exit			

3. Using the cursor key to move the cursor to the PLAY icon, and press ENTER to start playing the list.
4. Using the cursor key to move the cursor to the CLEAR icon, and press ENTER to clear the play list.
5. Press PGM to exit program menu.

Note:

- The program list will be cancelled when the main unit is power off or eject the disc.
- The unit can not play the list if you select the item that does not exist in the disc.


Using DISP/EPG

1. When in DVD mode, press DISP/EPG to display disc type, current title, current chapter and the playing time, press again to display the current subtitle language, the current audio language and the current angle number (during playback of a disc).
2. Press DISP/EPG for the third time to deactivate the information display.



Selecting subtitles


Press SUBTITLE to select the subtitle during DVD playback.

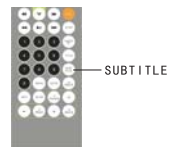

Note: With multiple subtitle language DVDs, the subtitle language can be switched during playback.


Selecting audio settings

1. Press AUDIO to select the audio language during DVD playback.
2. Press AUDIO to select the audio channel during VCD playback.

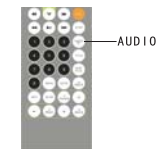


Selecting angles

Press ANGLE to select the play angle when playing a DVD disc.

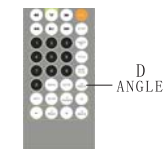

Hint: This function is only available on certain DVD media.

Playback of MP3 and JPEG discs

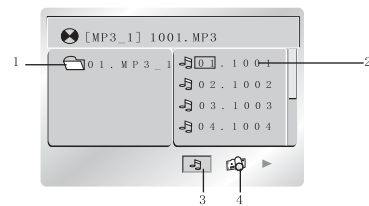


1. Directory
2. File
3. Mp3 icon
4. JPEG icon

- Using the cursor key to select the directory, file, Mp3 icon or JPEG icon
- Selecting Mp3 icon and press ENTER if you want to play MP3, selecting JPEG icon and press ENTER if you want to play JPEG
- Selecting a file and press ENTER if you want to play the file
- Press PLAY/PAUSE to play sequence

Playback of the files stored in the USB storage

Connecting the USB storage to the USB socket of the main unit, the file stored in the storage will be read automatically.

1. Turn on the unit, connect the USB storage to USB socket when the unit is in no disc mode.
2. "READ USB" and the files will be displayed on the screen.

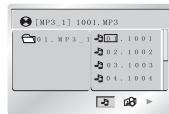

3. To operate USB storage, refer to MP3, JPEG disc operation for details. (page 33)

The MP3, JPEG, MPEG4 file can be played on this player.


Note:

- The unit must be in no disc mode when play the file stored in the USB storage

Playback of the files stored in the Memory card

Please insert the card (SD, MMC, MS) in to the socket. The file will be played automatically.

1. Turn on the unit, connect the SD, MMC, MS card to the socket when the unit is in no disc mode.
2. "READ CARD" and the files will be displayed on the screen.

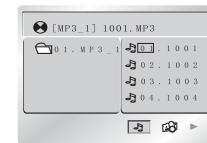

3. To operate Memory Card, refer to MP3, JPEG disc operation for details. (page 33)

The SD, MMC and MS can be read on this player.

Note:


- The unit must be in no disc mode when play the file stored in the card

Press SETUP when the main unit is in play mode. The set up menu will be displayed on the screen.

Selecting a TV system (when you attached a TV tuner)

Most countries around the world use one of the following video broadcast standards: NTSC, PAL, AUTO.


- NTSC: American and Asia countries
- PAL: Most European countries except for France
- Default: PAL

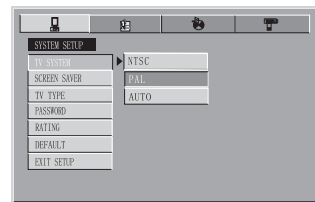

Setting screen saver

This function can save the TFT life if the unit stay in stop or no disc over 3 minutes.

- ON: screen saver enable
- OFF: screen saver disable
- Default: ON

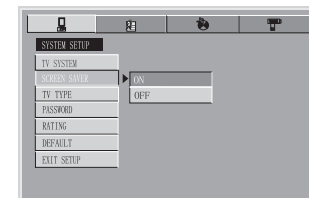


Note:

The picture may be a grey picture if the system is not correctly set.


Selecting a TV scale

- 16:9 : Please select this item when connecting this unit to a 16:9 TV set.
- 4:3LB : Please select this item when connecting this unit to a normal TV set.
- 4:3PS : Please select this item when connecting this unit to a normal TV set.
- Default: 16:9

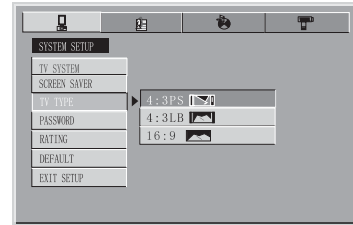

Setting parent lock

1. Input old password (Default : 0000)
2. Press ENTER/PLAY on the remote control , when the screen displays open lock icon, then input new password.

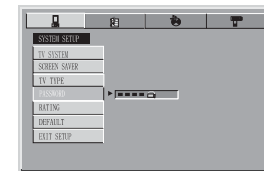


3. Press ENTER/PLAY again, the screen will display close lock icon, the new password is memorized.

Setting parent lock level

This setting can control the unit play parent lock DVD disc.

- Level is divided into 8 levels
- Default: ADULT

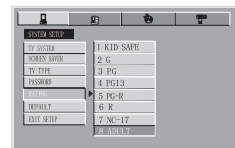

Note:

- The parent lock level can not be set if the parent lock is locked.

Default settings

To restore the factory setting, please select this item and press ENTER.



Selecting an OSD language


Please enter the OSD language menu, use cursor key \wedge/\vee to move the cursor to the desired language and press ENTER.



- Default language: English

Selecting an audio language


Please enter the audio language menu, use cursor key \wedge/\vee to move the cursor to the desired language and press ENTER.

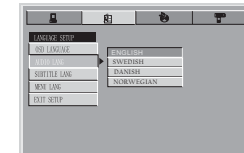

- This function allows for selecting different languages stored on the DVD media during playback.
- Default language: English

Selecting a subtitle language


Please enter the subtitle language menu, use cursor key \wedge / \vee to move the cursor to the desired language and press ENTER.

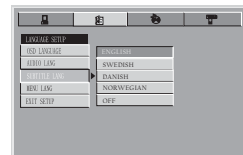

- This function allows for selecting different languages stored on the DVD media during playback.
- Default language: English

Selecting a menu language


Please enter the menu language menu, use cursor key \wedge / \vee to move the cursor to the desired language and press ENTER.

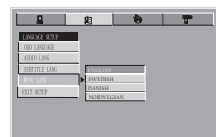

- This function allows for selecting different languages stored on the DVD media during playback.
- Default language: English


Selecting digital audio output

- SPDIF/OFF: switching off digital audio output.
- SPDIF/RAW: please set the audio output to RAW if you have a Dolby digital 5.1 or DTS capable amplifier.
- SPDIF/PCM: please set the audio output to PCM if you have a 2-channel Dolby digital amplifier.
- Default: SPDIF/PCM

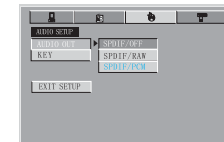


Adjusting the key

When you enter the KEY menu, you can use the cursor keys Δ / ∇ to adjust the desired tone and press ENTER.

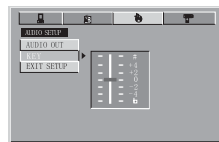


Adjusting the contrast

When you are in VIDEO SETUP, you can enter the CONTRAST menu and move the cursor keys Δ / ∇ to the desired contrast, then press ENTER.

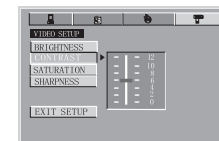


Adjusting the brightness

When you are in VIDEO SETUP, you can enter the BRIGHTNESS menu and move the cursor keys Δ / ∇ to the desired brightness, then press ENTER.

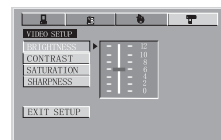


Adjusting the saturation

When you are in VIDEO SETUP, you can enter the saturation menu and move the cursor keys Δ / ∇ to the desired saturation, then press ENTER.

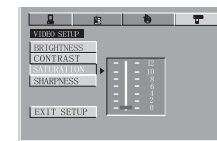

Adjusting the sharpness

When you are in VIDEO SETUP, you can enter the SHARPNESS menu and move the cursor keys \wedge / \vee the desired sharpness, then press ENTER.

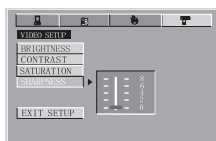

Troubleshooting

Please refer the following instruction when there are some problems with this unit. If the problem still exit, please consult your nearest service center.

Problem	Remedy
No power	<ul style="list-style-type: none"> • Insert the power plug securely into the DC IN jack. • Recharge the battery.
No audio at Digital Output	<ul style="list-style-type: none"> • Check the digital connections. • Check if the audio format of the selected audio language matches your receiver capabilities.
The player can not play	<ul style="list-style-type: none"> • Disc may have been placed in the tray upside down. • Player's region code should be the same as region code of DVD disc. • Disc should be clean or the disc is scratched. • This player cannot play discs other than supported by this player.
No sound	<ul style="list-style-type: none"> • Ensure that the equipment is connected properly and firmly into jacks. • Make sure the speakers are turned on. • If using a HiFi amplifier, try another sound source. • Check the Volume Adjustment.
The remote control does not work	<ul style="list-style-type: none"> • Check the batteries are installed with the correct polarity (+ and -). • The batteries are depleted: Replace them with new ones. • Point the remote control at the IR receiver window and operate. • Operate the remote control at a distance but no more than 5 meters from the IR receiver window.

Declaration of Conformity

For the following equipment:

Product name: **Jensen Media:Link 10200**

is herewith confirmed to comply with the requirements set out in the Council Directive on the Approximation of the Laws of the Member States relating to Electromagnetic Compatibility (89/336/EEC), Low-voltage Directive (73/23/EEC) and the Amendment Directive (93/68/EEC). For the evaluation regarding the Directives, the following standards were applied:

EN 301 357

The product also carries the CE mark according to the R&TTE directive 1999/5/EC.

The following importer / manufacture is responsible for this declaration:

JensenScandinavia AS
Gardermoen Næringspark
2065 Gardermoen Park
Norway



Technical Manager