

Jensen®
SCANDINAVIA



DVD - VCD - CD - MP3 - JPG - SD - USB - MPEG4 - DIVX

DVD

Operating Instructions

DUAL PORTABLE DVD PLAYER

MEDIA:LINK™ 7102



Content:

1	PRECAUTIONS	1	7	USING THE BATTERY	16
2	CAUTIONS ON USING THIS PLAYER	3		PRECAUTIONS BEFORE USING THE BATTERY	16
3	CHECKING ACCESSORIES	5		BATTERY LIFE	16
	OPTIONAL ACCESSORIES	6		USING THE BATTERY	16
4	SPECIFICATION	7		INSTALLING AND REMOVING BATTERY	17
	SPECIFICATIONS	7		RECHARGING BATTERY USING AC-DC ADAPTER	18
5	PART NAMES AND FUNCTIONS	8	8	CAUTIONS WHEN CHARGING BATTERY	18
	PART IN THE FRONT OF MAIN UNIT	8			
	PART AT THE LEFT SIDE OF MAIN UNIT	8		CONNECTING TO AC-DC ADAPTER	19
	PART AT THE TOP OF MAIN UNIT	8		CONNECTING TO EARPHONE	19
	MAIN UNIT CONTROL SECTION	9		CONNECTING A USB STORAGE	20
	PART IN THE BACK OF MAIN UNIT	10		CONNECTING TO MEMORY CARD	20
	PART IN THE BOTTOM OF MAIN UNIT	10		CONNECTING TO ATV/SET	21
	CONNECTING LCD SCREEN	11		CONNECTING A ACTIVE SPEAKER SYSTEM	22
	REMOTE CONTROL UNIT	12		CONNECTING TO A AUDIO/VIDEO PLAYER SYSTEM	23
6	USING REMOTE CONTROL UNIT	14			
	PRECAUTIONS BEFORE USING REMOTE CONTROL UNIT	14			
	REMOTE CONTROL UNIT OPERATING RANGE	14			
	INSTALL BATTERY FOR REMOTE CONTROL UNIT	15			

Content :

9	BASIC OPERATIONS	24	10	MAIN UNIT SETTING	33
	TURNING ON/OFF MAIN UNIT	24		SELECTING TV SYSTEM	33
	PLAYING DISCS	25		SELECTING SCREEN SAVER	33
	REMOVING DISCS	25		SELECTING TV SCALE	34
	MODE SETTINGS /BRIGHTNESS/ CONTRAST/COLOR/16:9/4:3 MODE/ AV OUT/IN MODE/VOLUME	26		SETTING PARRENT LOCK	35
	STOP PLAYING	27		SETTING PARRENT LOCK LEVEL	35
	PAUSING THE DISC	27		DEFAULT SETTINGS	35
	SCANNING FORWARD/BACKWARD	27		SELECTING OSD LANUAGE	36
	SLOW PLAYING	27		SELECTING AUDIO LANGUAGE	36
	REPEAT PLAYING THE DISC	28		SELECTING SUBTITLE LANGUAGE	36
	SEARCHING THE DISC	28		SELECT ING MENU LANGUAGE	36
	ZOOM PLAYING	28			
	PROGRAM PLAYING	29	11	TROUBLE SHOOTING	37
	USING OSD	30			
	SELECTING A SUB-TITLE	30	12	DECLARATION OF CONFIRMITY	38
	SELECTING AN AUDIO	30			
	SELECTING AN ANGLE	30			
	PLAYING MP3 AND JPEG DISC	31			
	PLAYING FILE FROM A USB STORAGE	32			
	PLAYING FILE FROM A MEMORYCARD	32			

Thank you for purchasing ML7102. Please read this manual carefully before operating and reserve it for future reference. It will be helpful to you if you encounter any operational problem

- WARNING:** TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE, DRIPPING OR SPLASHING AND THAT NO OBJECTS FILLED WITH LIQUIDS, SUCH AS VASES, SHALL BE PLACED ON THE APPARATUS. DANGEROUS HIGH VOLTAGES ARE PRESENT INSIDE THE ENCLOSURE. DO NOT OPEN THE CABINET. REFER SERVICING TO QUALIFIED PERSONNEL ONLY.
- ATTENTION:** TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.
- LASER:** This Digital Video Disc player employs a Laser System. To ensure proper use of this product, please read this owner's manual carefully and retain for future reference. Should the unit require maintenance, contact an authorized service location - see service procedure.



Use of controls, adjustments or the performance of procedures other than those specified may result in hazardous radiation exposure. To prevent direct exposure to laser beam, do not try to open the enclosure. Visible and invisible laser radiation when open and interlocks defeated. DO NOT STARE INTO BEAM

LASER		CLASS 1 LASER PRODUCT
Type	Semiconductor laser GaAlAs	
Wave length	650 nm/780nm	
Output Power	5mW	
Beam divergence	60degree	

ML7102

WARNING:

To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture. Use of controls or adjustments or performance of procedures those specified may result in hazardous radiation exposure.

CAUTION:

The defective units shall not be disassembled or opened without our company's prior consent or authorization.

CAUTION

RISK OF ELECTRIC SHOCK. DO NOT OPEN

To reduce the risk of electric shock, do not remove cover (or back). No user serviceable parts inside. Refer servicing to qualified service personnel.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



CAUTION:

INVISIBLE LASER RADIATION WHEN OPEN AND INTERLOCK FAILED OR DEFEATED.
AVOID DIRECT EXPOSURE TO LASER BEAM.

Do not move the player during playback

During playback, the disc spins at high speed, so do not lift or move the player. Doing so may damage the disc.

Place of installation

Select a stable place near the TV or stereo system to which you are going to connect the player. Do not place the player on top of a TV or color monitor. Install the player away from cassette decks or other devices which are easily affected by magnetic forces.

Do not place objects on top of the player

Do not place any objects on top of the player.

Turn off the power when not using the player

If the player is connected to your TV but not in use then switch the power off this will prevent interference with your normal TV picture. Noise problems may also be experienced if used near a radio.

Special note regarding use of player in vehicles

- Most countries and states have laws which prohibit or severely restrict the use of the player in vehicles while driving.
- Do not leave the player or the battery pack in places where the temperature is extremely low (about -10°C or lower) or extremely high (about 60°C or higher), such as inside the passenger cabin or trunk in midsummer. Doing so may warp the outer case or reduce the performance or quality of the battery pack.

When carrying on planes

Read the airline company's rules.

When carrying in hospitals

Read the hospital's rules.

When using with car power cable in cars

Please turn on the engine and then connect with the car power cable for using.

Cleaning the player

Normally clean the player using a soft, dry cloth. For tough dirt, apply some neutral detergent diluted in 5 to 6 parts water to a soft cloth, wring out thoroughly, wipe off the dirt, then wipe the player with a dry cloth. Note that alcohol, thinner, benzene, insecticides may cause the print or coating to peel off. Also avoid leaving rubber or plastic products in contact with the player for long periods of time, as this may damage the cabinet. When using chemically treated cloths, read the cloth's instructions carefully. Always unplug the power cord from the power outlet before cleaning the player.

To clean dirt off the liquid crystal display, wipe the display gently with a soft, dry cloth (such as an eyeglass, cleaning cloth). Note that leaving water droplets on the display for long periods of time may result in discoloration or stains. For tough dirt, use a commercially available liquid crystal display cleaner.

Copyrights

This product incorporates copyright protection technology that is protected by U.S. Patents and other intellectual property rights. Use of this copyright protection technology must be authorized by Macrovision, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Reverse engineering or disassembly is prohibited.

U. S Patent Nos 4, 631, 603; 4, 577, 216; 4, 819, 098; and 6, 516, 132.

DOLBY : Manufactured under license from Dolby Laboratories. "Dolby" and the double-D symbol are trademarks of Dolby Laboratories.

ML7102

Please check that all accessories listed below are included.

AC/DC adapter



AV cable



2 x Earphone



Car power cable



AV/power cable



2 x Headrest bag



Remote control



Operating manual



Media:Link 10

Optional car bracket for ML7102

(Sold separately)



ML7102

The discs listed on the below can be played on this player without any adapter



DVDs 12cm



Video CDs 12cm



Audio CDS 12cm



MP3 CDs 12cm



JPG CDs 12cm



This product supports the DivX® media format

Noted:


- Don't using the disc that is scratched seriously
- 8cm disc can not be played on this player

Specifications

Disc type	DVD Video Video CD DivX	CD-DA MP3 JPEG
Audio output	LINE OUT (20Hz - 20kHz) Earphone out	
Video output	Video output : 1.0Vpp/75 Ohm	
LCD panel	2 x 7" color TFT Pixels : 480 x 234	
Power	AC-DC adapter 12V/1.5A Battery 7.4V / 2600mAh	
Unit size	200 x 164 38 mm	
Weight (include battery)	about 760g	
Working temperature	5°C - 45°C	


Part names and functions

Part in the front of the main unit

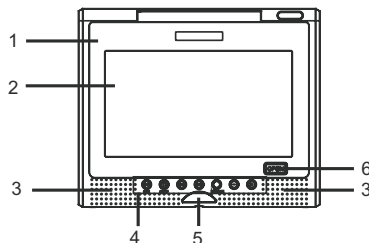

1. TFT cover
2. TFT display
3. Speakers
4. Control keys
5. IR receiver window
6. Open TFT cover
Push this button to open the TFT cover.

Part in the left of the main unit

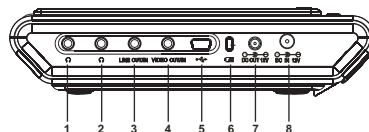

- 1/2. Earphone jack
3. Audio output / input
4. Video output / input
5. Mini USB socket
6. Battery LED indicator (RED)
- When charging, the LED will lit RED
- When battery is full, the LED is OFF.
7. DC output for TFT monitor
8. DC 12V Input for connecting AC-DC adaptor or 12V car adapter.


Part in the top of the main unit



9. SD/MMC Card socket

ML7102

 Main unit control section



1. Play/Pause/On button

- Press this to play disc. When press this in the play mode, pause mode is set. Press again to resume playback.
- Press this for 1.5 seconds to power on the unit.

2. Stop/Off button

- Press this to stop play mode
- Press this for 1.5 second to power off the unit. (Standby mode)

3. Previous/Next buttons

- Using these buttons to scan forward or backward through the tracks or chapters.
- Press these buttons for 1.5 seconds in fast forward or backward play mode. (X2, X4, X8, X20)

4. Mode, + and - buttons

- Press MODE to switch mode : Brightness, Contrast, Color, 16:9/4:3, Reverse mode, AV output / Input mode, volume and then use +/- to adjust.

- Brightness : level 0 - 32
- Contrast : level 0 - 32
- Color : level 0 - 32
- Scaling mode : 16:9 or 4:3
- Reverse : Switch screen normal or reverse



Normal



Reverse


- NO BATT : Means that battery have no power
- AV output / Input mode : Press + or - to enter AV output/input mode.
- Volume : level 0 - 32

5. +/- buttons

- Press these buttons to increase/decrease the volume when the main unit is in play mode.
- Press these buttons to adjust LCD mode when in LCD mode


Part in the back of the main unit

1. Support
Pull out the support to the proper position in order to let unit stand.
2. Battery
3. Screw
Loosen this screw to take out the battery.

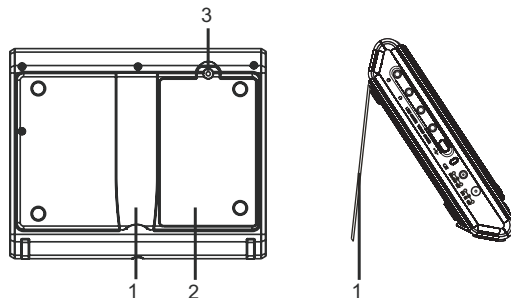


Part in the bottom of the unit

1. Fixed hole to ML-10 car bracket (sold separately)

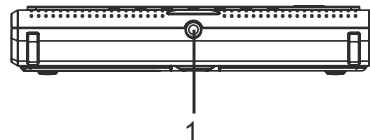


ML7102

Connecting LCD screen

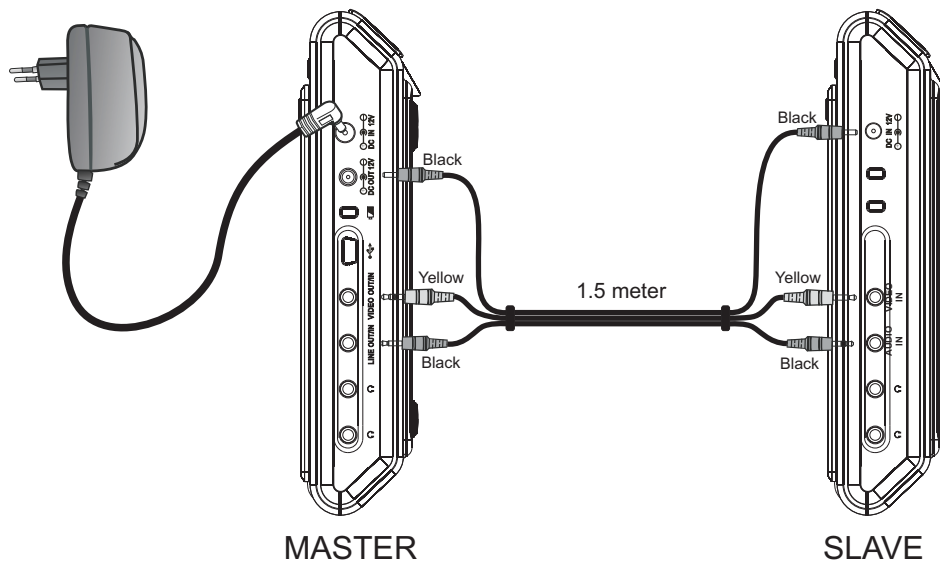

ML7102



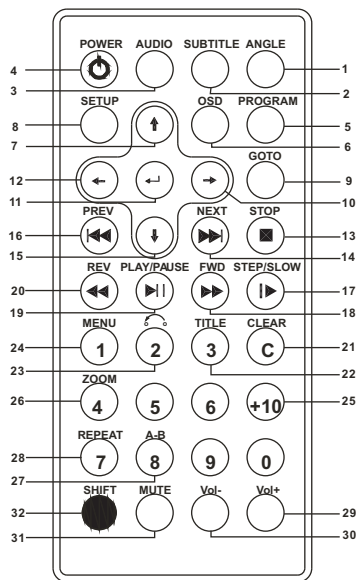

Remote control unit



- 1 **ANGLE**
Press this to select the DVD angle
- 2 **SUBTITLE**
Selecting sub-title
- 3 **AUDIO**
DVD: selecting audio language
VCD or CD: Selecting the audio channel
- 4 **POWER**
Power on/off the unit
- 5 **PROGRAM**
Programming the play sequence
- 6 **OSD**
Press this buttons to display the disc and playing information in the TFT
- 7 **↑**
Moving cursor Up
- 8 **SETUP**
Set up menu when the unit in play mode
- 9 **GOTO**
Selecting the Title/Chapter/Time to play
- 10 **→**
Moving cursor Right

ML7102

Remote control unit

- | | | |
|---|---|---|
| <p>11  this to confirm settings</p> <p>12  Moving cursor left</p> <p>13 STOP
Stop playing disc</p> <p>14 NEXT
Skip next track/chapter</p> <p>15  Moving cursor down</p> <p>16 PREV
Skip previous track/chapter</p> <p>17 STEP/SLOW
Press this to enter slowing play when the unit in play mode
Press this to step one frame when the unit in pause mode</p> <p>18 Forward
Press this to fast forward play when the unit in play mode</p> <p>19 PLAY/PAUSE
Press this to play or pause</p> | <p>20 REV
Press this to fast backward play when the unit in play mode</p> <p>21 CLEAR
Clearing the digit that is just input</p> <p>22 TITLE
Displaying DVD title</p> <p>23  Return to menu.</p> <p>24 MENU
Displaying the menu.</p> <p>25 DIGIT INPUT(0-9 and +10)</p> <p>26 ZOOM
Zooming the picture</p> <p>27 A-B
Press this to set A point, press again to set B point, then the unit playing from A to B repeated.
Press 3'rd to cancel the A-B play.</p> | <p>28 REPEAT
DVD: repeat play the title, chapter VCD,CD: repeat the track or whole disc</p> <p>29 VOL+
Increasing the volume</p> <p>30 VOL-
Decreasing the volume</p> <p>31 MUTE
Switch on/off the speakers or earphone</p> <p>32 SHIFT
Switching the Digit or Function for the number multifunction keys</p> |
|---|---|---|

Precautions before using remote control unit


- Please pull out the PVC before the remote control unit is being used the first time
- Don't drop or step on the remote control unit or subject it to shocks
- Note that it may not be possible to operate the main unit if there are obstacles between it and the remote sensor
- Don't expose the remote sensor to strong light.
- Use the remote control unit within the specified operating range and angle.

Remote control unit operating range/angle

<1> Horizontal: $\pm 30^\circ$


<2> Vertical: $\pm 30^\circ$

<3> Distance: 5m

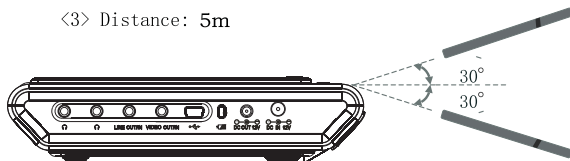

Note:


Most of the player's functions can be performed from the remote control unit. Some operations, however, only be performed from the main unit.

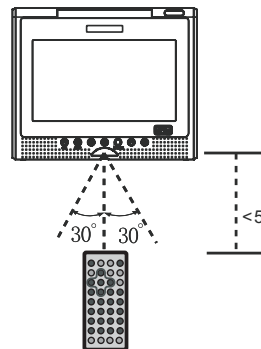


ML7102

Installing battery for remote control

- 1 Insert your finger nails into A and B on the diagram below, press A according to the direction, then pull out the battery holder.

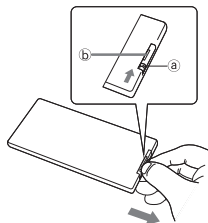


 - 2 Remove the old battery, then insert the new battery into the battery holder with the + side facing upwards.



Lithium battery (Cr2025)

- 3 Fit the battery holder back to its place.

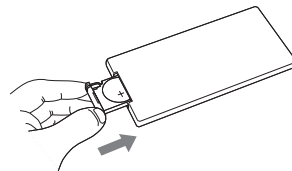

Note:

To prevent leakage of fluid from the lithium battery, remove the battery when not using the remote control unit for long periods of time (one month or more). If the battery leaks fluid, carefully wipe it out of the battery case, then change to a new lithium battery.

Precautions before using the battery

- Please fully charge the battery unit before using it for the first time.
- When the battery unit is recharged in a hot environment, it may not recharge fully
- The battery unit becomes hot after recharging, but this is not malfunction.

Battery life

- The battery unit can be used for about 300 cycles of recharging and operations, though this is variable depending on the operating conditions.


Using the battery

- The main unit can be playing for over 2 hours if the battery is fully charged.
- The picture may be unstable if the battery power is not good enough.
- Please recharge the battery when main unit is power off. Otherwise the battery recharge will take about 8 to 9 hours.
Please remove the battery unit from the main unit when it is not used in a long period of time.

Installing and removing the battery

1. Please install the battery as following:

- <1> Install the battery to the battery position (back of the player) according to the direction;
- <2> make sure that the battery is connected to the battery connector;
- <3> Tighten the screw.

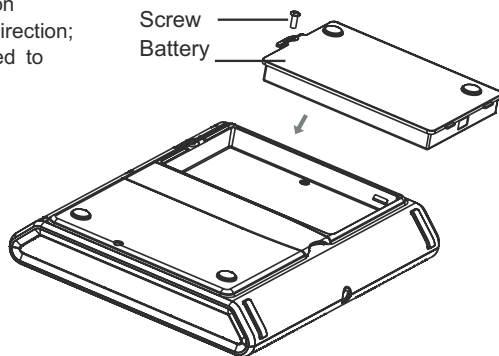

2. Please removing the battery as following:

- <1> Turn off the player.
- <2> Loosen the screw.
- <3> Take out the battery.


DO NOT PLACE BATTERY WRONG WAY

Recharging the battery by using AC-DC adapter

Please recharge the battery as follow :

Plug the AC-DC adapter and connect the DC output to DC IN in the main unit.

- LED indicator is red, means the battery is recharging.
- LED indicator is off, means the battery is fully charged.

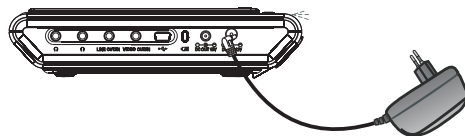

Cautions when charging the battery


- The temperature during recharging affects the recharging efficiency.
- Recharging is most efficient between temperatures of 10°C ~ 30°C.
- To protect the battery unit, do not recharge a fully charged battery unit repeatedly. Repeated overcharging the battery may deteriorate the battery performance.
- When the battery unit is hot, it may take longer than usual time for recharging or may sometimes be unable to be recharged. Wait for the battery unit to cool down before retrying recharging.

Connecting to AC-DC adapter

- 1 Please plug the AC-DC adapter to AC power socket;
- 2 Connecting the DC output of adapter to DC in of the main unit.

Note:

- 1.AC-DC adapter specification: 12V/1.5A
Please using the adapter that is the standard accessory of the main unit.
- 2.The AC-DC adapter can supply power to only a main unit and charge it's battery,can not supply power to a main unit and an external monitor outputing at max. power at the same time for a long time.

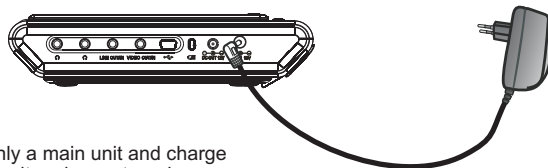


Connecting earphone

- Connect the earphone plug securely to the earphone jack on the main unit.
- To listen to the audio, using +/- to adjust the volume to a comfortable level.

Note:

Please do not use DTS disc. Strong noise is produced when DTS discs is played.

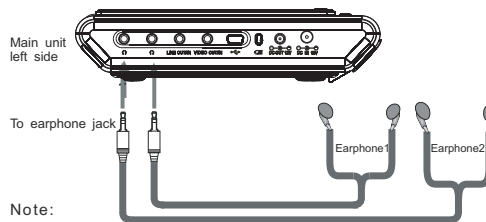

Note:


Insert the earphones plug securely. No sound will be heard unless the earphones are securely connected.

Connecting to USB storage

- 1 Please connect the USB storage to the USB terminal of the main unit
- 2 The main unit will read the contents of the USB storage automatically.

Note:

- The USB port support USB 1.1 only.
- The main unit can only read USB storage when there is no disc in main unit

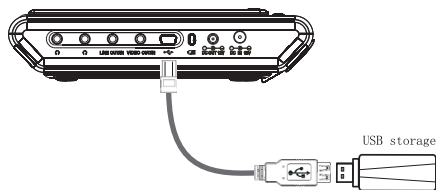


Connecting to memory card (SD/MMC/MS)

- 1 Please insert the memory card to the memory socket of the main unit
- 2 The main unit can read the contents in the memory card automatically

Note:

- Please insert the memory card in right direction.
- The main unit can read the contents of memory card when there is no disc in the main unit.

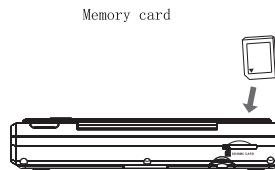


Connecting to a TV set

Before connecting, turn off the power of the player and the devices.


Note:

- Please set the main unit to DVD mode. Do not play DVDs when the audio connecting is not correct. Or may cause strong noise and damage your speakers.

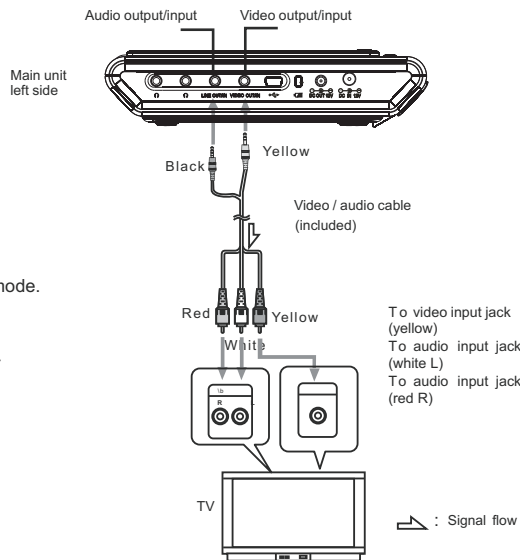


ML7102

Connecting to active speaker system

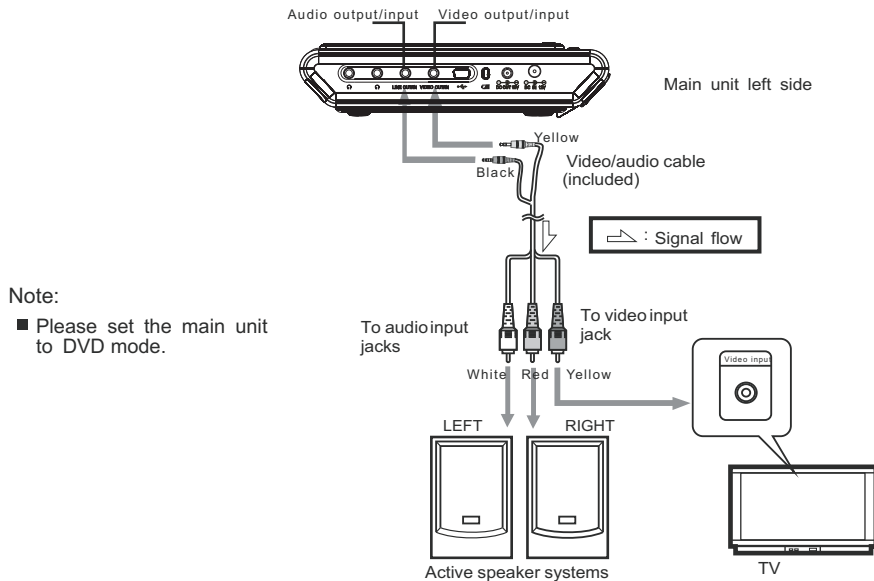

ML7102

Connecting to a Audio/Video player system

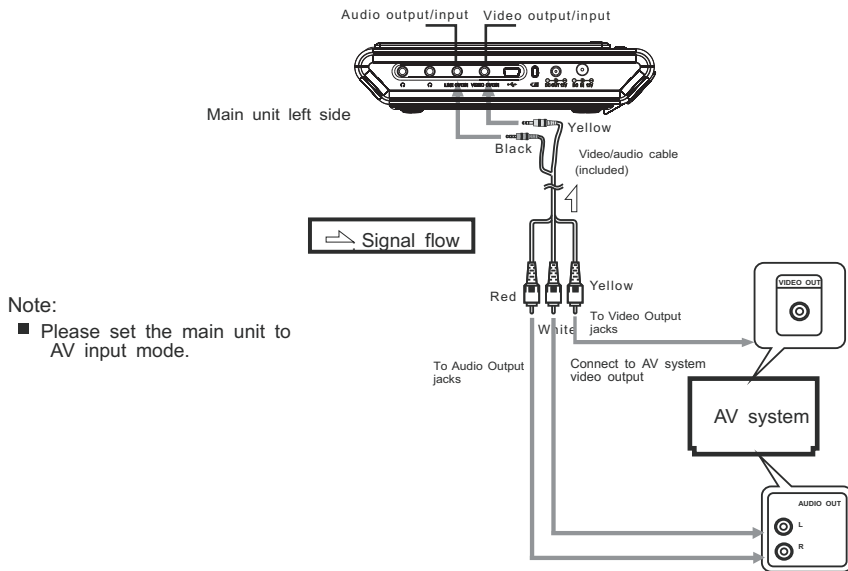

Turning on/off the main unit

1 Turn power on

- The main unit is in standby mode when the unit is powered
- Press POWER (remote control unit) or ON (main unit) 1.5 seconds to turn on the unit, power indicator led off




2 Turn power off


- Press POWER (remote control unit) or OFF (main unit) 1.5 second to turn off the unit, power indicator led light

3 Auto power off

- The unit will be auto power off and in standby mode when the unit stay over 5 minutes without any disc in the unit or in stop status.

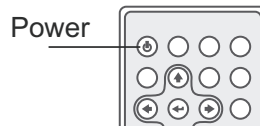

Playing discs

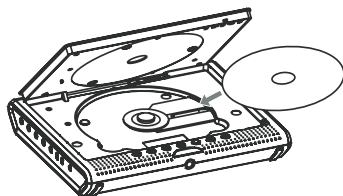

1. Power on the player
2. Open the TFT cover
3. Placing the disc
4. Close the TFT cover

Note:

- Please place the disc carefully
- Please don't use a bad disc

Playing discs

1. After finished Reading disc, there are the.
DVD/VCD/CD Showing on the TFT
2. The disc will be played automatically
3. Press PLAY to start to play

Removing disc

- 1 Press STOP to stop play
- 2 Open the TFT cover
- 3 Take out the disc
- 4 Close the TFT cover

Mode settings (Brightness/Contrast/Color/16:9/4:3 mode/Reverse mode/AV in/out / Volume)

Please press MODE (on the main unit) to select a suitable mode for your favourite when the main unit is in play mode.


- Press MODE to set Brightness
- Press MODE to set Contrast
- Press MODE to set Color
- Press MODE to adjust Scaling mode : 16:9 or 4:3
- Press MODE to select ReverseMode : Rotate screen 180°
- Press MODE to enter AV mode : press +/- to enter AV in
- Press MODE to adjust Volume

The volume setting is the default mode.
Press +/- to adjust volume directly.

- The unit will stop play the disc when it is in AV input mode.
- Please do not connect signal input when the unit is in AV output mode.
- AV output mode is default mode.

Note:

- Please press MODE 1.5 seconds, then the unit will come back to AV output mode

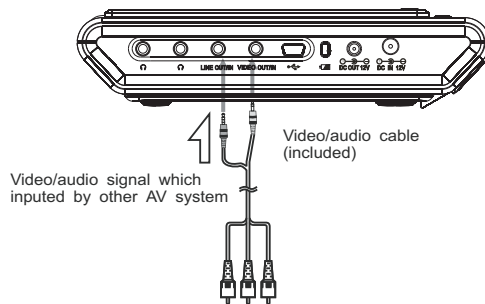

Stopping the playing

- 1 Press STOP to pause the playing, the unit can memorize the play point
- 2 Press PLAY to continues play from the pausing point
- 3 Press STOP to stop the disc.


Note :

On some discs, continues playing will not work.




Pausing the disc

- 1 Press PLAY/PAUSE to pause the playing when playing
- 2 Press PLAY/PAUSE to continues playing

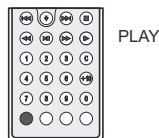

Scanning forward and backward

- 1 Press PREV/NEXT(in the main unit) 1.5 seconds to fast the playing when playing in forward/backward direction
- 2 Change the playing speed to X2, X4, X8, X20 and normal for every pressing PREV/NEXT in the main unit 1.5 seconds.

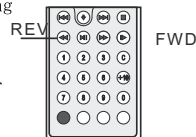


Hint:

The REV/FWD in the remote control unit may do fast playing.

Slow playing the disc

- 1 Press SLOW/STEP on the remote control to slow down playing. Change the speed to 1/2, 1/3, 1/4, 1/5, 1/6 and 1/7 for every time you press SLOW/STEP button.
- 2 Press SLOW/STEP to skip frame by frame when player is in pause mode.

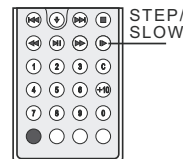


Note :

The sound is muted when using fast or slow paing mode, except CD and Mp3. Press PLAY to resume to normal speed.

Repeat playing the disc

1 A-B play mode

- Press A-B, the LCD will show Repeat A-
- Press A-B again, the main unit will repeat the play from A to B.
- Press A-B again, the unit will resume normal playing.

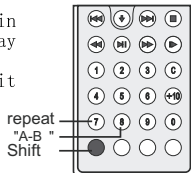

! Press SHIFT button to select the FUNCTION mode to use this function.


2 Repeat playing the title, chapter or track

- Press REPEAT to select the title, chapter or track when the unit is in play mode
- DVD: title, chapter; VCD or CD: track.

! Press SHIFT button to select the FUNCTION mode to use this function.


Searching the disc

- Press GOTO
- Using cursor key and ENTER to select the proper playing item.
- Input digit to select playing time, title, chapter or track.
- Press ENTER to confirm the playing item.
- Press GOTO to resume the play mode.

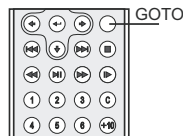

Zoom playing

- Press ZOOM every times, the picture will change to 2X, 3X, 4X, 1/2X, 1/3X, 1/4X and normal.

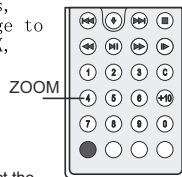

! Press SHIFT button to select the FUNCTION mode to use this function.

Program playing

The main unit may play the list according to the following program list:

1. Press PROGRAM, the menu will be shown in the LCD

Hint:


- T is for Title, C is for Chapter for DVD disc.
- T for track for CD, VCD.

PROG									
T	C		T	C		T	C		
1	---	---	5	---	---	9	---	---	---
2	---	---	6	---	---	10	---	---	---
3	---	---	7	---	---	11	---	---	---
4	---	---	8	---	---	12	---	---	---
Play		Clear				Exit			

PROG									
T	C		T	C		T	C		
1	01	:	001	5	---	9	---	---	---
2	02	:	002	6	---	10	---	---	---
3	---	:	---	7	---	11	---	---	---
4	---	:	---	8	---	12	---	---	---
Play		Clear				Exit			

Note:

There is no title, chapter or track for some disc.

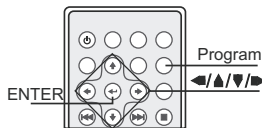

2. Use digit and cursor keys to select the list of what you want. See picture


3. Using the cursor key to move the cursor to the PLAY icon, and press ENTER to start to play the list
4. Using the cursor key to move the cursor to the CLEAR icon, and press ENTER to clear the play list.
5. Press PLAY/PAUSE or select the EXIT icon and press ENTER to exit program menu.

Note:

- The program list will be cancel when the main unit is power off or eject the disc.
- There is no program function for some disc.
- The unit can not play the list if you select the item that does not exist in the disc.
- The disc.


Using OSD

1. Press OSD to show the play and disc information in the LCD when the main unit is in play mode
2. Press OSD again to disable the information display

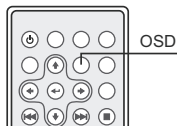


Selecting a sub-title

Press SUBTITLE to select the subtitle when main unit is in play mode.

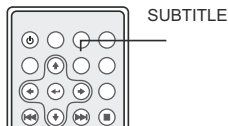


Selecting an audio

 1. Press AUDIO to select the audio language when the main unit is in play mode for DVD disc
2. Press AUDIO to select the audio channel when the main unit is in play mode for VCD, CD disc.




Selecting an angle

 Press ANGLE to select the play angle when the main unit is in play mode for DVD disc, there is no function for other disc.



Playing MP3 and JPEG disc

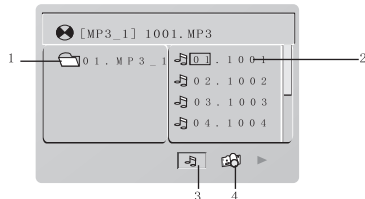

1. Directory
2. File
3. Mp3 icon
4. JPEG icon

- Using the cursor key </^/∇/> to move the cursor to the directory, file, MP3 icon or JPEG icon
- Selecting MP3 icon and press ENTER if you want to play MP3, selecting JPEG icon and press ENTER if you want to play JPEG
- Selecting a file and press ENTER if you want to play the file.
- Press PLAY/PAUSE to play sequence
- Press A-B to repeat A-B playing.

 
Note:

- The LCD will be off if there is no operation on the unit over 3 minutes when playing CD, MP3. And the Power LED will be flash in the status.
- LCD will be on for any operation on the unit .

Playing the file storing in a USB storage

Connecting the USB storage to the USB socket of the main unit, the file stored in the storage will be read automatically.

1. Power on the unit, connecting the USB storage to USB socket. (in no disc mode)
2. "READ USB" will be shown in LCD and the files will be display in the LCD when the unit finished the reading.



3. Operation is like play MP3 or JPEG
4. Please remove the USB storage directly when do not play the USB storage


Note:

- USB in this unit is USB 1.1
- The unit must be in no disc mode when play the file stored in the USB storage

Playing the file storing in a memory card

Please insert the card (SD, MMC, MS) in to the socket. The file will be played automatically.

1. Power on the unit, inserting the card in to the socket. (in no disc mode)
2. "READ CARD" will be shown in LCD and the files will be display in the LCD when the unit finished the reading.

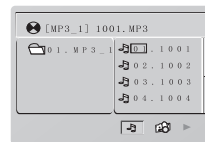

SD, MMC and MS can be read in this unit

Note:


- The unit must be in no disc mode when play the file stored in the card

Press SETUP when the main unit is in play mode. The set up menu will be displayed in LCD.

Selecting a TV system

Please select the proper video signal system if you want to see on a TV set.

- NTSC: please select this item when TV set is NTSC system TV set
 - PAL: please select this item when TV set is PAL system TV set
- Default: NTSC

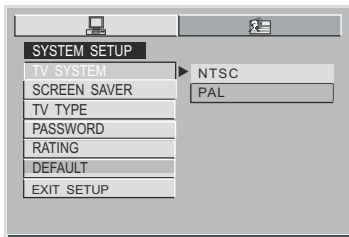


Note:

- The picture may be a grey picture if the system is not correctly set.

Setting screen saver

This function can save the TFT life.

- ON: screen saver enable
- OFF: screen saver disable
- Default: ON

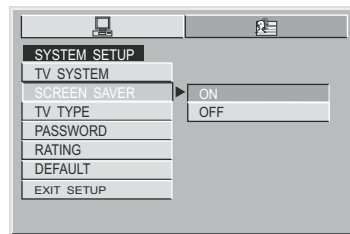


Selecting a TV scale

16:9 : Please select this item when connecting this unit to a 16:9 TV set.

4:3LB : Please select this item when connecting this unit to a normal TV set.

4:3PS : Please select this item when connecting this unit to a normal TV set.

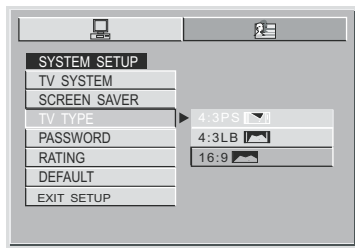


Note:

- Picture scale is depending the disc.

Setting parent lock


1. Default setting: 0000
2. When unlock, new parent lock can be input and select the parent lock level

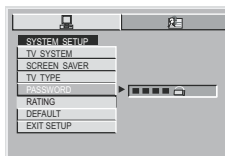

Setting parent lock level

This setting can control the unit play parent lock DVD disc.

- Level is divided into 2 level: normal and children
- Selecting Normal, the lock is cancel
- Default: Normal

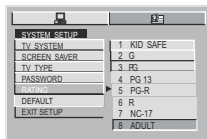


Note:

- The parent lock level can not be set if the parent lock is locked.

Default setting

To restore the factory setting, please select this item and press ENTER

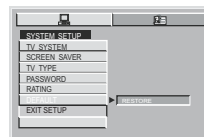

Note:

- To enter last page set, please select last page item and press ENTER


Selecting OSD language

Please enter the OSD language select menu, use cursor key \wedge/\vee to move the cursor to the language what you want and press ENTER



Selecting audio language

Please enter the audio language select menu, use cursor key \wedge/\vee to move the cursor to the language what you want and press ENTER

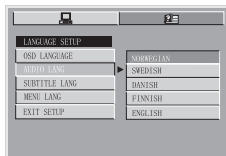


Selecting sub-title language

Please enter the sub-title language select menu, use cursor key \wedge/\vee to move the cursor to the language what you want and press ENTER



Selecting menu language

Please enter the menu language select menu, use cursor key \wedge/\vee to move the cursor to the language what you want and press ENTER

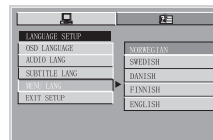

Note:

- The language will be the disc default language if the language you want is not visible

Trouble shooting

Please refer the following instruction when there are some problem with this unit. If the problem still exit, please consult your nearest service center.

PROBLEM	POSSIBLE REASON	SOLUTION
Disc cannot play	Disc error	Insert disc in right direction
	Disc dirty or scratch	Using good disc
	Area code error	Use right area code disc
No picture on TV	Cable loosen	Insert the cable again
	Setting error	Set TV or DVD player correctly
No speaker sound	Earphone in use	Remove earphone
No sound from TV or amplifier	Cable loosen	Insert cable again
	Connecting cable error	Connecting cable correctly
Different volume for DVD/CD disc	Disc recorded in different levels	Adjust volume level

Declaration of Confirmity

For the following equipment:

Product name: **Jensen Media:Link 7102**

is herewith confirmed to comply with the requirements set out in the Council Directive on the Approximation of the Laws of the Member States relating to Electromagnetic Compatibility (89/336/EEC), Low voltage Directive (73/23/EEC) and the Amendment Directive (93/68/EEC). For the evaluation regarding the Directives, the following standards were applied:

EN 301-357

The product also carries the CE mark according to the R&TTE directive 1999/5/EC.

The following manufacturer is responsible for this declaration:

Jensen Scandinavia AS
Gardermoen Næringspark
2065 Gardermoen Park
Norway



Technical Manager

ML7102