

User Manual





Media:Link 7300

7" Widescreen TFT Portable DVD/CD/MP3 player



PLEASE READ THIS MANUAL CAREFULLY BEFORE OPERATION

	<p>CAUTION</p> <p>WARNING: SHOCK HAZARD. DO NOT OPEN. AVIS: RISQUE DE CHOC ELECTRIQUE. NE PAS OUVRIR</p>	
<p>CAUTION: TO REDUCE THE RISK OF FIRE AND ELECTRIC SHOCK, DO NOT REMOVE THE COVER (OR BACK) OF THE UNIT. REFER SERVICING ONLY TO QUALIFIED SERVICE PERSONNEL.</p>		

For Customer Use:

Enter below the serial number that is located on the bottom of the unit. Retain this information for future reference.

Model No. ML7300

Serial No. _____



The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operation and servicing instructions in the literature accompanying the appliance.

WARNING:

To prevent fire or shock hazard, do not expose this device to rain or moisture. Dangerous high voltage is present inside the enclosure. Do not open the cabinet.

CAUTION:

This Digital Video Disc player employs a laser system. To prevent direct exposure to the laser beam, do not try to open the enclosure or defeat the safety interlocks. When open and the interlocks are defeated, visible laser radiation is present.

Use of controls, adjustments, or performance of procedures other than those specified herein may result in hazardous radiation exposure. **DO NOT STARE INTO THE BEAM.**

FCC Notice:

This equipment has been tested and found to comply with the limits for a Class B digital device pursuant with the FCC Rules, Part 15. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions may cause harmful interference to radio communication.

CAUTION:

To prevent electric shock, match wide blade of plug to wide slot of outlet and fully insert.

NOTICE:

This product incorporates copyright protection technology that is protected by U.S. patents and other intellectual property rights. Use of this copyright protection technology must be authorized by Macrovision, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision. Reverse engineering or disassembly is prohibited.

Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories. Confidential Unpublished Works.
© 1992-1997 Dolby Laboratories. All rights reserved.


	<p>This player has built-in copy-right protection technology that prevents copying from a DVD disc to any media.</p>
<p>If a video recorder is connected to the player, the video output image will be distorted during recording.</p>	

 


For recycling or disposal information about this product, please contact your local authorities or the Electronics Industries Alliance: www.eiae.org.

Menu Navigation


To navigate DVD disc menus or the player's setup menus:

- Press the DIRECTION keys (arrows) to select a desired feature or option in the menu.
- Press ENTER to confirm a selection in the menu.
 - For some menu options, you may be able to use the numeric keypad to input data.
- Press  to cancel an entry.

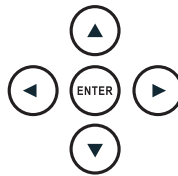

Numeric Keypad

 - Use the numeric keypad to skip directly to a DVD chapter or CD track. (Some discs may not allow direct access function.)
- Use the numeric keypad to input numeric data in menu option fields when possible.

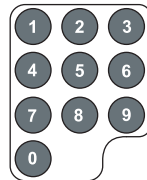

Disc Error Messages

The following messages will be displayed on-screen if there is a problem with the format of the loaded disc.

- WRONG PASSWORD.** The parental rating level of the disc is higher than the parental rating level setting of the player. The player will not play the disc.
- Invalid Disc .** The player is equipped with automatic disc quality detection software. If the player detects a disc that is damaged or has a format problem, it may play the disc at a lower quality or stop play completely, depending on how damaged the disc is.
- DTS Discs:** This player does not have a built-in DTS decoder.
 - Connect to a digital amplifier using a Digital Audio Connection (optical or coaxial) to enjoy DTS audio discs.
 - Select Dolby 5.1 or 2-Channel Stereo Downmix instead of the DTS setting.

Note:

DVD disc production quality may vary; some discs may deviate from the industry standard. Some incorrectly-formatted discs may still play, however, the playback and operational quality of the disc may be substandard.

Power Management


If the player will not be in use for a long period of time, set the Power Switch to the OFF position, unplug the player, and remove the batteries from the remote control.

Rechargeable Battery Pack

****For new or exhausted rechargeable battery pack, we recommend it be recharged for 4 hours.**

 To charge the battery, just connect the AC adapter.

Do not attempt to replace or repair the battery by yourself unless you are a qualified service personnel.

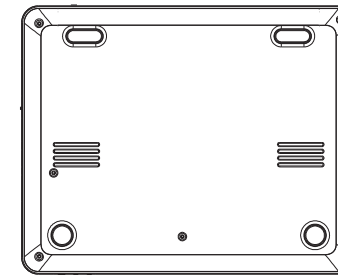

(NHMH Rechargeable Battery Pack)

**** The battery can be recharged about 300 times without obvious performance drop. ****

 
Note:

- Only use original ML7300 charger.
- Never dispose of in fire or heat up.
- Do not use in high temperature or near heat sources.
- Do not open the cover. Refer servicing only to qualified service personnel.
- Do not charge up the battery pack while the DVD player is working with the battery pack.
- Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

Low Battery Detection: The unit will auto stop and turn to STANDBY mode when voltage reaches too low.

Remote Control

- Refer to the diagram. Remove the battery compartment cover located on the rear of the remote control. Insert batteries, making sure to match their polarities (+/-) to the markings on the inside of the compartment. Replace the cover.
- To use the remote, point it at the remote sensor of the player. Operate the remote within 15 feet of the sensor and at an angle of +/- 60 degrees.
- Batteries in the remote will last for approximately 1 year. Replace the batteries if the remote control does not work. Do not mix old with new batteries, or different types of batteries.
- Remove the batteries from the remote if it will not be used for a long period of time.

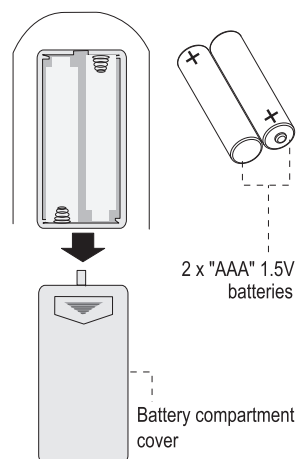

WARNING

- The batteries used in the remote control may present a fire or chemical burn if mistreated. Do not recharge, disassemble, incinerate, or heat the battery (~ 100°C)
- Keep batteries away from children.

Power Supply

This unit should be used with 100-240V 50/60Hz AC wall outlets, only.

Caution:

- Do not connect the power plug to a power outlet other than that which is indicated here and on the label as this may result in the risk of fire or electric shock.
- Do not handle the power plug with wet hands. Doing so may cause electric shock.

Basic Playback

- Prepare the connections and power supply.
- Load a disc.
Open the DVD cover by hand, place a disc into the disc tray with the label side facing up, close the cover by hand.
 - If a single-sided disc is inserted upside-down, the player will display "NO DISC" or "Invalid Disc".
- Start playback.
Press PLAY to start playback (some discs may start playing automatically).

Play/Pause/Stop

 
- Press to play the disc for the first time.
- Press during playback to pause. Press again to resume playback.
- Press during playback to stop the disc ("Pre-Stop"). Press to resume playback at the time-point at which the disc was stopped.
- Press when the disc is "Pre-Stopped" to stop playback completely. (When is pressed, the disc will start playing from the beginning.)

Previous/Next (Skip)


- Press to skip to the next track (DVD, CD, etc).
- Press to return to the previous track (DVD, CD, etc).

Forward/Reverse (Search)

- Repeatedly press the button to search fast forward through a disc.

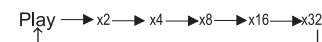

 - Repeatedly press the button to search fast backward through a disc.

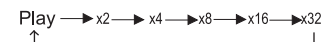

Slow

- Press SLOW for slow-motion playback. Each successive press of SLOW will change the rate of slow-motion playback. Press to resume normal playback.

Play → x 1/2 → x 1/4 → x 1/8 → x 1/16 → 1/32

Press STEP frame-by-frame playback. Each successive press of STEP will advance the video one frame. Press to resume normal playback.

 
Note:

Audio will be muted during fast-forward, fast-reverse, and slow-motion playback.

NOTE

IMPORTANT SAFETY INSTRUCTIONS

1. Read Instructions: All the safety and operating instructions should be read before the product is operated.
2. Retain Instructions: The safety and operating instructions should be retained for future reference.
3. Heed Warnings: All warnings on the product and in the operating instructions should be adhered to.
4. Follow Instructions: All operating and usage instructions should be followed.
5. Cleaning: Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
6. Attachments: Use only attachments recommended by the manufacturer. Use of other attachments may be hazardous.
7. Water and Moisture: Do not use this product near water (e.g., near a bath tub, wash-bowl, kitchen sink, laundry tub, in wet basements, or near a swimming pool and the like).
8. Accessories: Do not place this product on an unstable cart, stand, tripod, bracket, or table. Use only with carts, stands, tripods, brackets, or tables recommended by the manufacturer or sold with the product. Any mounting of the product should follow the manufacturer's instructions and should use a mounting accessory recommended by the manufacturer.
9. A product and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the product and cart combination to overturn.
10. Ventilation: Slots and openings in the cabinet are provided for ventilation to ensure reliable operation of the product and to protect it from overheating. These openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer instructions have been adhered to.
11. Power Sources: This product should be operated only from the type of power source indicated on the rating label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. For products intended to operate from battery power or other sources, refer to the operating instructions.
12. Grounding or Polarization: This product may be equipped with a polarized alternating-current line plug that has one blade wider than the other. This plug will only fit into the power outlet in one direction. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the direction of the plug. If the plug should still fail to fit, contact an electrician to replace the obsolete outlet. Do not defeat the safety purpose of the polarized plug.
13. Power-Cord Protection: Power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and at the point which they exit from the product.
14. Protective Attachment Plug: The product may be equipped with an attachment plug with overload protection. This is a safety feature. See the operating instructions for replacement or directions to reset the protective device. If replacement of the plug is required, be sure the service technician has used a replacement plug that has the same overload protection as the original plug as specified by the manufacturer.
15. Outdoor Antenna Grounding: If an outside antenna is connected to the product, be sure the antenna system is grounded so as to provide some protection against voltage surges and built-up static charges. Article 810 of the National Electrical Code, ANS/NFPA 70 provides information.

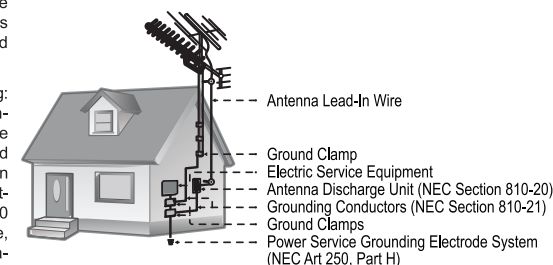

IMPORTANT SAFETY INSTRUCTIONS

tion with regard to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna-discharge unit, size of grounding conductors, location of antenna-discharge unit, connection to grounding electrodes, and requirements for the grounding electrode (see figure).

16. Lightning: For added protection for this product, unplug it from the wall outlet and disconnect the antenna or cable system during a lightning storm or when it is left unattended and unused for long periods of time. This will prevent damage to the product due to lightning or power-line surges.
17. Power Lines: An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits, as contact with them might be fatal.
18. Overloading: Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.
19. Object and Liquid Entry: Never push objects of any kind into this product through openings as they may touch dangerous voltage points or shout-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.
20. Servicing: Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
21. Damage Requiring Service: Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions: a) when the power-supply or plug is damaged; b) if liquid has been spilled or if objects have fallen into the product; c) if the product has been exposed to rain or water; d) if the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation; e) if the product has been dropped or damaged in any way; f) when the product exhibits a distinct change in performance—this indicates a need for service.
22. Replacement Parts: When replacement parts are required, be sure that your service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, or other hazards.
23. Safety Check: Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to ensure that the product is in proper operating condition.
24. Wall or Ceiling Mounting: The product should be mounted to a wall or ceiling only as recommended by the manufacturer.
25. Heat: The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat. Read these instructions carefully. Keep these instructions for future reference.

Note:

The rating label is located on the rear panel of the device.

Note: 1. The battery pack should not be exposed to excessive heat such as sunshine, fire or the like.
2. The mains plug or an appliance coupler was used as the disconnect device, the disconnect device shall remain readily operable and should not be obstructed during intended use.

Caution

Danger of explosion if the battery is incorrectly replaced.
Replace only with the same or equivalent type,

SPECIFICATION

Power supply	DC 9.0V 2A (AC adapter TERMINAL)
Power consumption	<=9w
Signal system	NTSC / PAL
Video output	1±0.2V (p-p), 75ohm, Negative sync., 3.5 mm mini jack x1
Audio output	1.5 Vrms (1 KHz, 0dB), 3.5 mm mini jack x1
Earphone terminal	3.5mm stereo mini jack x1
Signal /Noise ratio(audio)	90dB typical
Dynamic range(audio)	90dB typical
Panel size	7 inch (16:9)
Resolution	480(H) x 234 (V) (QVGA) Pixels
Laser	Wavelength 650 nm
Operating conditions	Temperature: 0 °C to 35 °C. Operation status : Horizontal
Dimensions	187x170x50mm (Main Unit & Batt.)
Weight	937g (Main Unit & Batt.)

TROUBLESHOOTING

There is no sound or distorted sound.

- Ensure that the TV and amplifier have been turned on and properly set up.
- Ensure that the TV and amplifier connections are secure and correct.
- Try a different Audio track of the DVD by pressing AUDIO.
- Ensure that the MUTE function of the TV, Amplifier, or Player is not engaged.

The remote control doesn't work.

- Ensure that the Power Switch has been physically set to the ON position.
- Ensure that there are no obstacles between the remote and the player.
- Point the remote at the remote sensor on the main unit.
- Ensure that the batteries in the remote retain a charge and have been installed correctly.
- Try replacing the remote's batteries.

The player has malfunctioned.


 
 
 
 
 
 
- Unplug the player. After 30 minutes, plug in and power on the player -- the restore function should reset the player.

TABLE OF CONTENTS

SAFETY INFORMATION	Page
IMPORTANT SAFETY INSTRUCTIONS	
TABLE OF CONTENTS	
UNPACKING.....	6
NOTE ON DISC.....	7
LOCATION OF CONTROLS.....	8-10
CONNECTIONS.....	11-13
GETTING STARTED.....	14
BASIC OPERATION	15-16
PLAYER FUNCTIONS.....	17-20
SETUP MENU.....	21-22
TROUBLE SHOOTING.....	23-24
SPECIFICATIONS.....	25

UNPACKING

 Please make sure the following items are included with your DVD player. If any items are missing, contact your dealer.

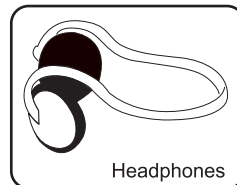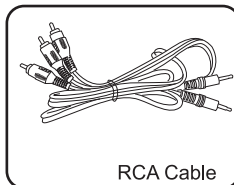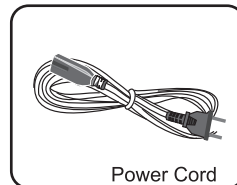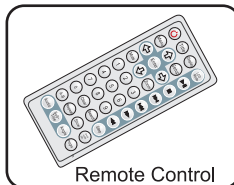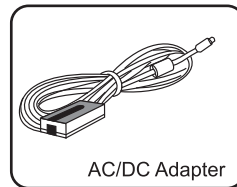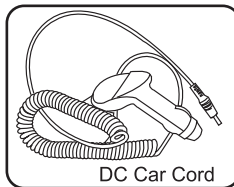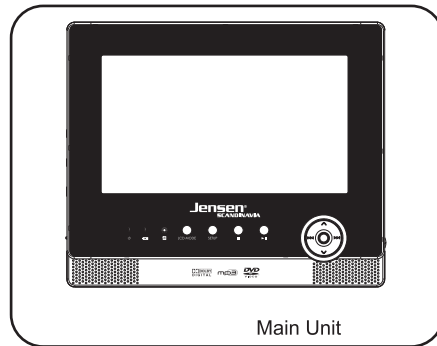

TROUBLESHOOTING

If you have a problem with your ML7300, please read the troubleshooting guide below and check our webpage at www.jensenscandinavia.com for Frequently Asked Questions (FAQs) and firmware updates. If there resources do not solve the problem, please contact Technical support.

Email : support@jensenscandinavia.com

Web : www.jensenscandinavia.com

There is no power to the device.

- Ensure that the Power Switch on the main unit is physically set to the ON position.
- Ensure that the AC adapter cord is securely connected to the player and the proper wall outlet.

The device will not play the disc.

- Ensure that a supported disc is loaded in the player label-side up.
- Ensure that the disc's rating level does not exceed the player's parental rating level.
- Ensure that the disc is not damaged or too dirty. Clean the disc or try another disc.
- Moisture may have condensed inside the player. Remove the disc and leave the player on for 1-2 hours and then try again.

There is no picture.

- Ensure that the TV set has been powered on and is set to the correct AV mode.
- Ensure that the connections between the player and the TV are secure and correct.
- Check if the connection cables are damaged.
- Restore the player to it's factory-default settings: open the disc tray, and then press PROGRAM and ZOOM together.

The picture is noisy or distorted.

- The disc may be damaged or dirty. Clean the disc or try another one.
- Reset your TV's color system.
- Ensure that the player is connected directly to the TV (and not through a VCR, cable box, satellite receiver, etc.)

The picture is not full-screen.

- Change the aspect ratio setting of your player from the Setup menu.
- Select a different aspect ratio option from the DVD disc menu.

Audio Setup



Item	Description	Default Setting
Audio Setup	Sets the audio channel mix mode (LT/RT, Stereo).	Stereo
Spdif Dolby	Set the audio output mode. (PCM, RAM, OFF)	RAW

Parental Setup

Item	Description	Default Setting
Change	You must input the four-digit password to access the Parental settings. The initial password is 8888. Enter the old password, the new password, and then the new password again to verify and change the Parental Settings password. Restoring the player's default settings will not reset the password. DO NOT FORGET THE PASSWORD; this password cannot be reset.	
Rating Level	Sets the maturity rating level of the player. The player will not play any discs rated higher than this setting. There are eight rating levels. Level 1 will restrict playback to discs suitable for people of all ages. Level 8 will allow playback of all discs, including those suitable for adults only.	8

Disc Requirements

This DVD player supports playback of the following discs.

Type	Disc Mark	Content Type	Disc Size	Max. Playback Time
DVD-Video Discs		Audio + Video (moving picture)	12 cm	133 min (SS-SL)
				242 min (SS-DL)
				266 min (DS-SL)
				484 min (DS-DL)
Audio Compact Discs (CDs)		Audio	12 cm	74 min
JPEG CDs	--	Still Picture	12 cm	--

This unit can play back CD-R and CD-RW discs that contain audio titles or JPEG picture files. Discs not listed above are not supported by this unit (e.g., PC CD-ROM, CD-Extra, CD-G, CD-I, etc.)

Disc Care and Maintenance

Optical discs (DVDs, CDs) contain high-density compressed data and need proper handling.

Handling a Disc

- Hold a DVD/CD by its edges. Avoid touching the recorded side of the disc. To remove a DVD/CD from its storage case, press down on the center retention mechanism of the case and lift the disc out.
- Do not subject discs to prolonged exposure to direct sunlight, high humidity, or high temperatures.
- Do not bend or press discs.
- To reduce the risk of scratches, always put discs back in their case after use. Store discs vertically in a cabinet.
- Do not place stickers or labels on either side of a disc.



 
Cleaning a Disc

Use a dry, soft cloth to wipe off any fingerprints and dusts from the playing surface of the disc. Wipe in a straight line radially from the center to the outside edge of the disc. Small dust particles and light stains will not affect playback quality.




Never use chemicals such as record sprays, anti-static sprays, benzene, or thinners to clean a disc. Doing so will damage the surface of the disc permanently.

LOCATION OF CONTROLS

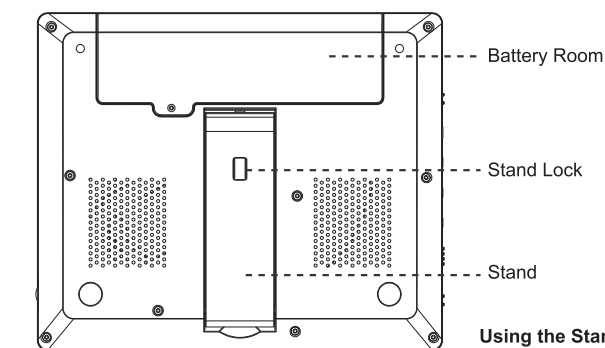

Using the Stand

 1. Lift up the stand from the base recess.
2. Support the unit against the stand.
3. Set the lock switch to "On".

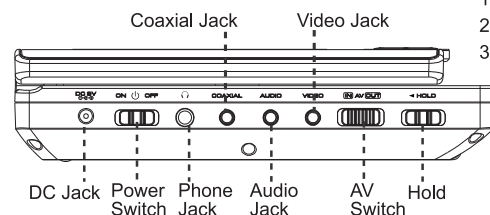

Power Switch

Set the power on/off.

DC 9V IN

Connect to the supplied AC Adapter or the DC Car Cord for power supply.

Hold Switch

Prevent the unit from the unexpected action.

AV Switch

Switch between AV IN and AV OUT.

Coaxial

 
Output the audio signal.

Video

Input/Output the video signal.

Audio


Input/Output the audio signal

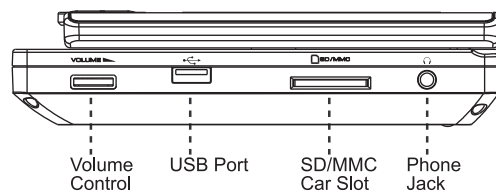

SETUP

Various features of the player can be adjusted in the SETUP menu:

 1. Press SETUP button to show setup menu.
2. Press direction button to select the desired item.
3. Press ENTER to confirm..

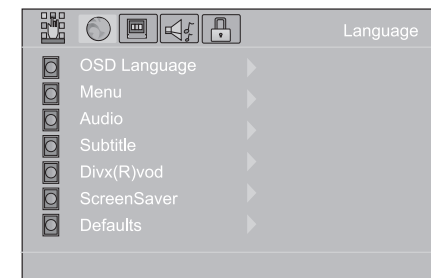

Language Setup

Item	Description	Default Setting
OSD Lang	Sets the language of the player's on-screen display.	English
Menu	Sets the menu language	English
Audio	Set the audio language	English
Subtitle	Sets the subtitle language	English
DivX(R)vod	Display the Divx information	
Screen Saver	The screensaver prevents burn-in damage to the player's screen.	On
Defaults	Resets all settings to the factory default	


Display Setup

Item	Description	Default Setting
TV Type	Sets the aspect ratio of the display. 4:3 is used with standard television displays; 16:9 is used with widescreen television displays.	16:9
TV System	Sets the player's Video Out signal type. Set this to correspond with your TV's Video System type. NTSC is the standard used in North America.	NTSC
View Mode	Sets the view mode. (Fill, Original, Height Fit, Width Fit, Auto Fit).	Auto Fit

PLAYER FUNCTIONS

Program Function

 Press the "Program" button to display the program menu. (eg: DVD mode)

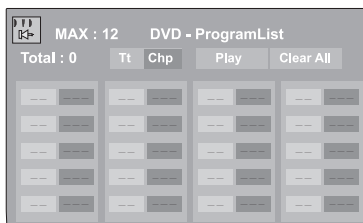


1. Press the DIRECTION buttons to move between entries.
2. Press the NUMBER buttons to input data
3. To delete the incorrect input, press the CLEAR or ENTER button.
To delete all programs, select "Clear All" and press ENTER.
4. Press Play/Pause to start playback or select "Play" from the menu and press ENTER.
5. To cancel, press Program twice.

USB/SD/MMC-Card Access

Press the DVD/USB/SD button on the remote to display the working source menu,
You also can access this menu by holding the LCDMODE/USB/SD button on the main unit for a short while.
Press the up/down direction button to select DVD/USB/Card from the menu, press ENTER to access.

 LOCATION OF CONTROLS

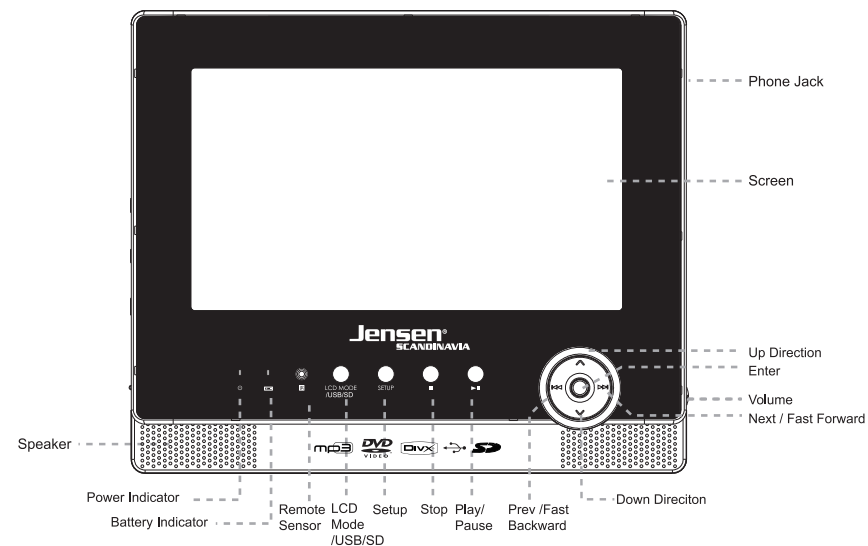

For your reference:

1. Place a disc with the label facing up and push gently on the center of the disc so it goes into position.
2. To start playing, press the PLAY/PAUSE button. (Some discs will start playing automatically).
3. To stop playing, press the STOP button.
4. To Skip Forward/Skip Backward, press the NEXT/PREV button.
5. To Fast Forward/Fast Backward, press/hold the NEXT/PREV button.

 
LCD Mode/USB/SD Button

Briefly press this button to display the LCD menu, you can adjust screen effect through the LCD menu.

Press and hold this button for a short while to display the working source menu, you can access the DVD/USB/Card using this menu.

LOCATION OF CONTROLS

Remote control surface

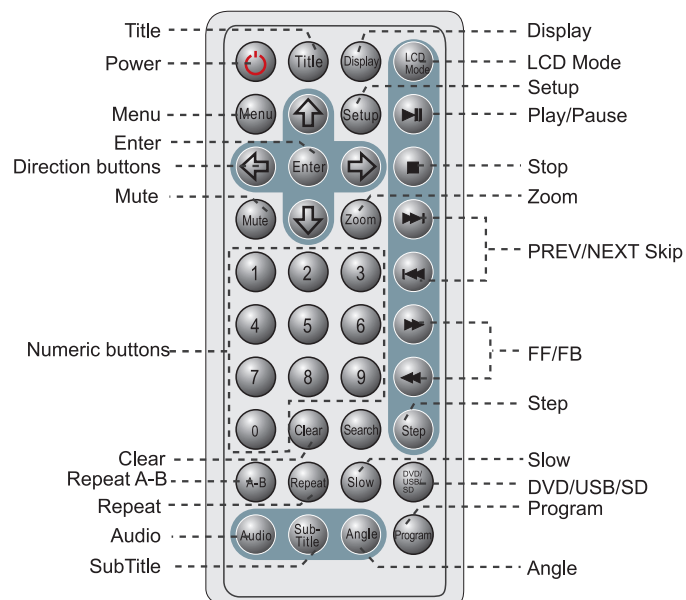

The remote control transmits a directional infrared beam. Be sure to aim the remote control directly at the infrared remote sensor during operation. The sensor may not be able to receive signals properly if the sensor is covered, if there is a large object between the remote control and the sensor, or if it is exposed to direct sunlight or a strong artificial light (e.g., fluorescent or strobe lights). In this case, change the direction of the light or reposition the unit to avoid direct lighting.

PLAYER FUNCTIONS

CLEAR

Press the Clear button to cancel the incorrect input in DVD program .

SEARCH

Go to a desired section through SEARCH function.
Press the Search button to show below picture.

DVD Mode



 
CD Mode



1. Press the direction buttons to move between entries.
2. Press the number buttons to input data. To cancel the incorrect input, press the Clear button.
3. Press ENTER or the Play/pause button to execute the search.
4. Press the Search button to quit.

LCD Mode

Press the LCD Mode button to display the LCD menu.

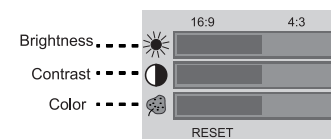

Press the up/down direction button to select the desired item, press the left/right direction button to make adjustment.

When SCREEN is selected, press the left/right button to change the screen dimension as 16:9 or 4:3.
When RESET is selected, press ENTER to confirm, the above three control bars will be reverted to the factory default.

PLAYER FUNCTIONS

Repeat A-B Mode

To repeat a specific section of a disc (play on a loop):

1. Press A-B to set the desired start point ("A") of the section to be repeated.
2. Press A-B again to set the desired end point ("B") of the section to be repeated.
3. The section "A-B" will now play repeatedly as a loop. Press A-B again to resume normal playback.

Multi-Angle/Subtitle/Audio

- During playback of a DVD that has been mastered with multiple angles, press ANGLE to view the available alternate camera angles. (A DVD may have up to 9 selectable angles.)
- During playback of a DVD that has been mastered with subtitles, press SUBTITLE to view the available subtitle tracks. (A DVD may have up to 32 selectable subtitles.)
- During playback of a DVD that has been mastered with alternate language/audio tracks, press AUDIO to hear the alternate tracks. (A DVD may have up to 8 selectable audio tracks.)

Zoom

Press ZOOM to change the magnification level of the picture.

- During DVD playback, each successive press of ZOOM will change the level of magnification to: 2X → 3X → 4X → 1/2X
- During JPEG CD playback, each successive press of ZOOM will change the level of magnification to: 2X → 3X → 4X → 1/2X

When the magnification level is greater than Normal/100%, use the NAVIGATION keys to pan around the magnified picture.

 
Note: The picture quality will decrease as the zoom level (magnification) increases.

CONNECTIONS

Audio/Video Connections

Slide the AV switch to AV IN to input the AV signal


Slide the AV switch to AV OUT to output the AV signal

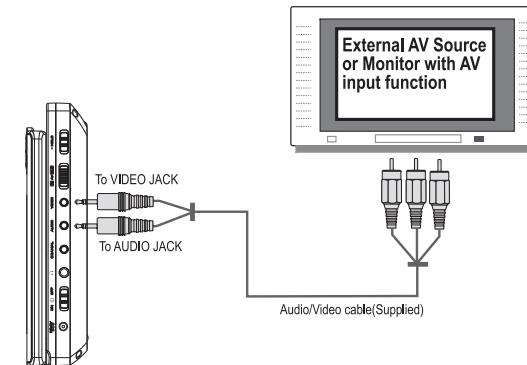


1. Refer to the owner's manual of the external device as well.
2. Before connecting the power source, be sure to have all necessary connections properly done.
3. If the player will not be used for a long period of time, disconnect the power and remove the battery from the remote control.

USB/SD/MMC-Card Connection

 
1. Insert the USB/SD Card into the corresponding slot on the unit's side panel, press and hold the LCD MODE/USB/SD button on the unit's panel or briefly press the DVD/USB/SD button on the remote to display the DVD/USB/Card select menu. Press the up/down direction button to select USB or Card from the menu, press ENTER to access.
2. It takes a short while for the unit's reading data. After the device is detected, the screen will display the working menu, press the direction buttons to select the desired file from the menu and press Play/Pause to start playback.

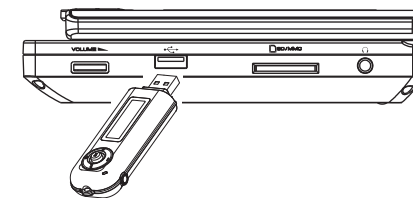

Coaxial Out Connection

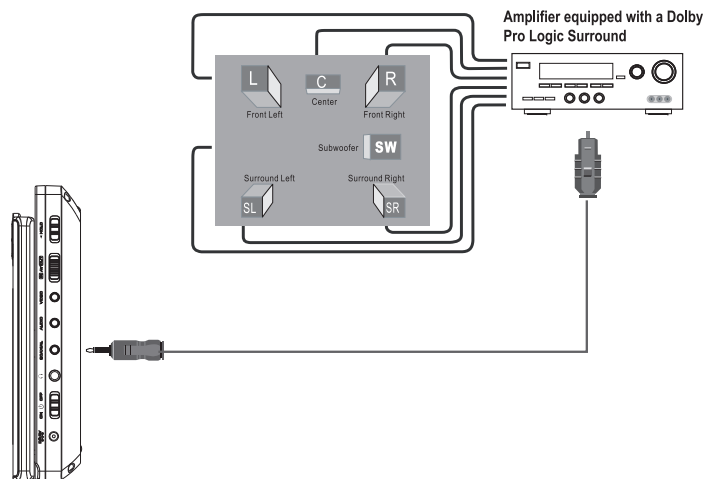 

Power Connection

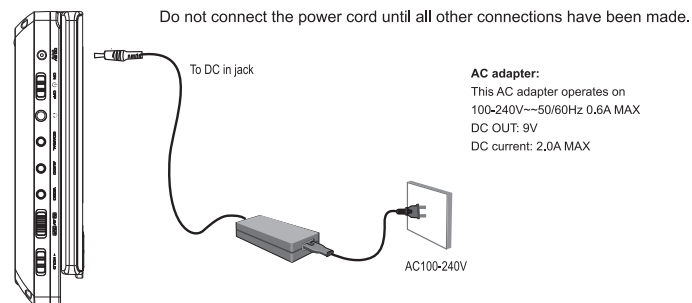 

Power is supplied through the provided appropriate power adapter, one end of which is connected to the DC IN jack on the main unit, another to wall outlet with AC100-240V.

Note:

- If you have difficulty inserting the plug, turn it over and reinsert it.
- If the unit will not be in use for long periods of time, disconnect the plug from the outlet.
- In order to prolong the operation life, the intervals of continuous power on should be not less than 30s.

Menu / Title

- Press the MENU key during DVD playback to return to the disc's Main menu.
- Press the TITLE key during DVD playback to return to the disc's Title menu.

Setup

Press the SETUP key to enter the player's setup menu. Enter the Setup menu to adjust the player's internal settings; please see the [SETUP](#) section for more details.

Display

Repeatedly press the Display key to show the playback information.
To quit the display mode, keep pressing the Display button to finish the show.

Repeat Mode

Press REPEAT to change the repeat mode of the player. Each successive press of REPEAT will change the mode as follows:

	DVD Mode	CD Mode
REPEAT x1	Repeat All	Repeat All
REPEAT x2	Repeat Title	Repeat Track
REPEAT x3	Repeat Chapter	Repeat Off
REPEAT x4	Repeat Off	

Note:

Some DVD discs do not allow Repeat mode.